

Automation1 iXC4 and XC4 PWM Digital Drives

HARDWARE MANUAL

Revision 2.15





GLOBAL TECHNICAL SUPPORT

Go to the Global Technical Support Portal for information and support about your Aerotech, Inc. products. The website supplies software, product manuals, Help files, training schedules, and PC-to-PC remote technical support. If necessary, you can complete Product Return (RMA) forms and get information about repairs and spare or replacement parts. To get help immediately, contact a service office or your sales representative. Include your customer order number in your email or have it available before you call.

This manual contains proprietary information and may not be reproduced, disclosed, or used in whole or in part without the express written permission of Aerotech, Inc. Product names mentioned herein are used for identification purposes only and may be trademarks of their respective companies.

Copyright © 2018-2024, Aerotech, Inc., All rights reserved.



Table of Contents

Automation1 iXC4 and XC4 PWM Digital Drives	1
Table of Contents	3
List of Figures	
List of Tables	
EU Declaration of Conformity	
UKCA Declaration of Conformity	
Korean Certification	
Agency Approvals	12
Safety Procedures and Warnings	13
Handling and Storage	18
Installation Overview	
Chapter 1: iXC4/XC4 Overview	10
·	
1.1. Feature Summary	
1.2. Ordering Options	
1.3. Functional Block Diagram	
1.4. Electrical Specifications	
1.4.1. System Power Requirements	
1.4.2. Real-Time Clock Requirements (iXC4 Only)	
1.5. Mechanical Specifications	
1.5.1. Mounting and Cooling	
1.5.2. Dimensions	
1.6. Environmental Specifications	
1.7. Drive and Software Compatibility	29
Chapter 2: Installation and Configuration	31
2.1. Input Power Connections	
2.1.1. Control Supply Connector	
2.1.2. Motor Supply Connector	
2.1.3. Transformer Options	
2.1.4. Minimizing Noise for EMC/CE Compliance	
2.2. Motor Power Output Connector	42
2.2.1. Brushless Motor Connections	
2.2.1.1. Brushless Motor Powered Motor and Feedback Phasing	
2.2.1.2. Brushless Motor Unpowered Motor and Feedback Phasing	
2.2.2. DC Brush Motor Connections	
2.2.2.1. DC Brush Motor Phasing	
2.2.3. Stepper Motor Connections	
2.2.3.1. Stepper Motor Phasing	
2.2.4. Three Phase Stepper Motor Connections	48
2.2.4.1. Stepper Motor Phasing	48
2.3. Feedback Connector	
2.3.1. Primary Encoder Inputs	
2.3.1.1. Square Wave Encoder (Primary)	
2.3.1.2. Absolute Encoder (Primary)	
2.3.1.3. Sine Wave Encoder (Primary) [-MX1 Option]	
2.3.1.4. Encoder Phasing	
2.3.2. Hall-Effect Inputs	
2.3.3. Thermistor Input	
2.3.4. Encoder Fault Input	
2.3.5. End of Travel and Home Limit Inputs	
2.3.5.1. End of Travel and Home Limit Phasing	
2.3.6. Brake Outputs	
2.4. Safe Torque Off Input (STO)	
2.4.1. STO Standards	
2.4.2. STO Functional Description	
2.4.3. STO Startup Validation Testing	
2.4.4. STO Diagnostics	
2.5. Auxiliary I/O Connector	
•	

2.5.1. Auxiliary Encoder Interface	
2.5.1.1. Square Wave Encoder (Auxiliary)	
2.5.1.2. Absolute Encoder (Auxiliary)	
2.5.2. Position Synchronized Output (PSO)	73
2.5.3. Digital Outputs	75
2.5.4. Digital Inputs	78
2.5.5. High-Speed Inputs	
2.5.6. Analog Output 0	
2.5.7. Analog Input 0 (Differential)	
2.6. Brake Power Supply Connector	
2.7. HyperWire Interface	
2.8. External Shunt Option [-SX1]	
2.9. Sync Port	
2.10. Industrial Ethernet (iXC4 Only)	
2.11. System Interconnection	
2.12. PC Configuration and Operation Information	91
Chapter 3: -EB1 Option Expansion Board	93
3.1. Digital Outputs [-EB1]	
3.2. Digital Inputs [-EB1]	
3.3. Analog Outputs [-EB1]	101
3.4. Analog Inputs [-EB1]	
3.5. PSO Interface [-EB1]	
Chapter 4: Cables and Assessaries	105
Chapter 4: Cables and Accessories	
4.1. Joystick Interface	
4.2. Handwheel Interface	108
Chapter 5: Maintenance	109
5.1. Preventative Maintenance	
5.2. Fuse Specifications	
·	
Appendix A: Warranty and Field Service	113
Appendix B: Revision History	115
la da a	447

List of Figures

Figure 1-1:	iXC4 Digital Drive-Based Controller Labeled	19
Figure 1-2:	XC4 Digital Drive Labeled	20
Figure 1-3:	Functional Diagram	23
Figure 1-4:	Dimensions	27
Figure 1-5:	Dimensions [-EB1]	28
Figure 2-1:	Control Supply Connections	32
Figure 2-2:	Motor Supply Connections	33
Figure 2-3:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (40 VDC Bus)	35
Figure 2-4:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (80 VDC Bus)	
Figure 2-5:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (160 VDC Bus)	
Figure 2-6:	TV0.3-28 Transformer Control and Motor Power Wiring (40 VDC Bus)	
Figure 2-7:	TV0.3-56 Transformer Control and Motor Power Wiring (80 VDC Bus)	39
Figure 2-8:	TM3/TM5 Transformer Control and Motor Power Wiring	40
Figure 2-9:	Brushless Motor Configuration	43
Figure 2-10:	Positive Motor Direction	44
Figure 2-11:	Encoder and Hall Signal Diagnostics	44
Figure 2-12:	Brushless Motor Phasing Oscilloscope Example	45
Figure 2-13:	Brushless Motor Phasing Goal	45
Figure 2-14:	DC Brush Motor Configuration	46
Figure 2-15:	Positive Motor Direction	46
Figure 2-16:	Stepper Motor Configuration	47
Figure 2-17:	Positive Motor Direction	47
Figure 2-18:	Three Phase Stepper Motor Configuration	48
Figure 2-19:	Positive Motor Direction	48
Figure 2-20:	Square Wave Encoder Schematic (Feedback Connector)	51
Figure 2-21:	Absolute Encoder Schematic (Feedback Connector)	52
Figure 2-22:	Sine Wave Encoder Phasing Reference Diagram	53
Figure 2-23:	Sine Wave Encoder Schematic (Feedback Connector)	54
Figure 2-24:	Encoder Phasing Reference Diagram (Standard)	55
Figure 2-25:	Position Feedback in the Diagnostic Display	55
Figure 2-26:	Hall-Effect Inputs Schematic (Feedback Connector)	56
Figure 2-27:	Thermistor Input Schematic (Feedback Connector)	57
Figure 2-28:	,	
Figure 2-29:	End of Travel and Home Limit Input Connections	60
Figure 2-30:	End of Travel and Home Limit Input Schematic (Feedback Connector)	60
Figure 2-31:	· · · · · · · · · · · · · · · · · · ·	
Figure 2-32:	Brake Connected to the 25-Pin Feedback Connector (Typical)	62
Figure 2-33:	Typical STO Configuration	64
Figure 2-34:		
Figure 2-35:	Square Wave Encoder Interface (Aux I/O Connector)	71
Figure 2-36:	Absolute Encoder Schematic (Auxiliary I/O Connector)	72
Figure 2-37:		
Figure 2-38:	· · · · · · · · · · · · · · · · · · ·	
Figure 2-39:	· · · · · · · · · · · · · · · · · · ·	
Figure 2-40:	Digital Outputs Connected in Current Sinking Mode	77
Figure 2-41:	Digital Inputs Schematic (Aux I/O Connector)	78
Figure 2-42:	Digital Inputs Connected to Current Sourcing Devices	79
Figure 2-43:	Digital Inputs Connected to Current Sinking Devices	79

Figure 2-44:	High-Speed Inputs	80
Figure 2-45:	Analog Output 0 Schematic	81
Figure 2-46:	Analog Input 0 Schematic	82
Figure 2-47:	Drive-Based System Wiring Drawing (Best Practice)	88
Figure 2-48:	PC-Based System Wiring Drawing (Best Practice)	88
Figure 2-49:	Recommended System Connections for a Drive-Based Controller	89
Figure 2-50:	Recommended System Connections for a PC-Based Controller	90
Figure 3-1:	-EB1 I/O Option Board Connectors (iXC4 shown)	93
Figure 3-2:	Digital Outputs Schematic [-EB1]	96
Figure 3-3:	Digital Outputs Connected in Current Sourcing Mode [-EB1]	97
Figure 3-4:	Digital Outputs Connected in Current Sinking Mode [-EB1]	97
Figure 3-5:	Digital Inputs Schematic [-EB1]	99
Figure 3-6:	Digital Inputs Connected to Current Sourcing (PNP) Devices [-EB1]	100
Figure 3-7:	Digital Inputs Connected to Current Sinking (NPN) Devices [-EB1]	100
Figure 3-8:	Analog Output Typical Connection [-EB1]	101
Figure 3-9:	Analog Input Typical Connection [-EB1]	102
Figure 3-10:	PSO Output Sources Current	104
Figure 3-11:	PSO Output Sinks Current	104
Figure 3-12:	PSO TTL Outputs Schematic	104
Figure 4-1:	Two Axis Joystick Interface (to the Aux I/O of two drives)	106
Figure 4-2:	Two Axis Joystick Interface (to the I/O board)	107
Figure 4-3:	Handwheel Interconnection to Aux I/O Connector	108
Figure 4-4:	Handwheel Interconnection to the Aux I/O through a BBA32 Module	108
Ciaura E 1.	Fuel Leasting on the IVC4 Control Board	111

List of Tables

Table 1-1:	Example Order and Ordering Options	22			
Table 1-2:	Electrical Specifications (Common) 24				
Table 1-3:	Electrical Specifications (by Ordering Option)	24			
Table 1-4:	Mounting Specifications	26			
Table 1-5:	Environmental Specifications	29			
Table 1-6:	Drive and Software Compatibility	29			
Table 2-1:	Control Supply Connector Pinout	32			
Table 2-2:	ontrol Supply Mating Connector Ratings				
Table 2-3:	Motor Supply Connector Pinout	33			
Table 2-4:	Motor Supply Mating Connector Ratings	33			
Table 2-5:	Nominal Motor Operating Voltages / Required AC Voltages	34			
Table 2-6:	Transformer Options	34			
Table 2-7:	Motor Power Output Connector Pinout	42			
Table 2-8:	Motor Power Output Mating Connector Ratings	42			
Table 2-9:	Wire Colors for Aerotech-Supplied Brushless Motor Cables	43			
Table 2-10:	Hall Signal Diagnostics	44			
Table 2-11:	Wire Colors for Aerotech-Supplied DC Brush Motor Cables	46			
Table 2-12:	Wire Colors for Aerotech-Supplied Stepper Motor Cables	47			
Table 2-13:	Feedback Connector Pinout	49			
Table 2-14:	Feedback Mating Connector Ratings	49			
Table 2-15:	Multiplier Options				
Table 2-16:	Primary Encoder Pins on the Feedback Connector	50			
Table 2-17:	Square Wave Encoder Specifications	51			
Table 2-18:	Absolute Encoder Specifications	52			
Table 2-19:	Sine Wave Encoder Specifications				
Table 2-20:	Hall-Effect Feedback Pins on the Feedback Connector	56			
Table 2-21:	Thermistor Input Pin on the Feedback Connector	57			
Table 2-22:	Encoder Fault Input Pin on the Feedback Connector	58			
Table 2-23:	End of Travel and Home Limit Pins on the Feedback Connector	59			
Table 2-24:	Brake Output Pins on the Feedback Connector	62			
Table 2-25:	Brake Control Specifications				
Table 2-26:	STO Connector Pinout	63			
Table 2-27:	STO Mating Connector Ratings				
Table 2-28:	STO Electrical Specifications	64			
Table 2-29:	STO Standards	65			
Table 2-30:	STO Standards Data	65			
Table 2-31:	STO Signal Delay				
Table 2-32:	Motor Function Relative to STO Input State				
Table 2-33:	STO Timing68				
Table 2-34:	Auxiliary I/O Connector Pinout	69			
Table 2-35:	Auxiliary I/O Mating Connector Ratings				
Table 2-36:	Auxiliary Encoder Pins on the Auxiliary I/O Connector	70			
Table 2-37:	Square Wave Encoder Specifications				
Table 2-38:	Absolute Encoder Specifications 72				
Table 2-39:	PSO Specifications				
Table 2-40:	PSO Pins on the Auxiliary I/O Connector				
Table 2-41:	Digital Output Specifications				
Table 2-42:	Digital Output Pins on the Auxiliary I/O Connector				

Table 2-43:	Digital Input Specifications	78		
Table 2-44:	Digital Input Pins on the Auxiliary I/O Connector	78		
Table 2-45:	High-Speed Input Specifications			
Table 2-46:	High-Speed Input Pins on the Auxiliary I/O Connector	80		
Table 2-47:	Analog Output Specifications	81		
Table 2-48:	Analog Output Pins on the Auxiliary I/O Connector	81		
Table 2-49:	Analog Input Specifications	82		
Table 2-50:	Analog Input Pins on the Auxiliary I/O Connector	82		
Table 2-51:	Brake Power Supply Connector Pinout	83		
Table 2-52:	Brake Power Supply Mating Connector Ratings	83		
Table 2-53:	HyperWire Card Part Number	84		
Table 2-54:	HyperWire Cable Part Numbers	84		
Table 2-55:	-SX1 Component Information	85		
Table 2-56:	Maximum Additional Storage Energy for a Standard iXC4/XC4	86		
Table 2-57:	Sync-Related Functions	87		
Table 2-58:	Sync Port Cables	87		
Table 3-1:	Digital Output Specifications [-EB1]	94		
Table 3-2:	Digital Output 1 Connector Pinout [-EB1]	95		
Table 3-3:	Digital Output 2 Connector Pinout [-EB1]	95		
Table 3-4:				
Table 3-5:	Digital Input Specifications [-EB1]	98		
Table 3-6:	Digital Input 1 Connector Pinout [-EB1]	98		
Table 3-7:	Digital Input 2 Connector Pinout [-EB1]	99		
Table 3-8:	Digital Input 1 and 2 Mating Connector Ratings [-EB1]99			
Table 3-9:	Analog Output Specifications [-EB1]	101		
Table 3-10:	Analog Output Connector Pinout [-EB1]	101		
Table 3-11:	Analog Output Mating Connector Ratings [-EB1]	101		
Table 3-12:	Differential Analog Input Specifications [-EB1]	102		
Table 3-13:	Analog Input Connector Pinout [-EB1]	102		
Table 3-14:	Analog Input Mating Connector Ratings [-EB1]	102		
Table 3-15:	PSO Specifications [-EB1]	103		
Table 3-16:	PSO Interface Connector Pinout [-EB1]	103		
Table 3-17:	PSO Interface Mating Connector Ratings [-EB1]	103		
Table 4-1:	Standard Interconnection Cables	105		
Table 5-1:	LED Description	109		
Table 5-2:	Troubleshooting	109		
Table 5-3:	Preventative Maintenance	110		
Table 5-4:	Control Board Fuse Specifications	111		

EU Declaration of Conformity

ManufacturerAerotech, Inc.Address101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

Product iXC4/XC4

Model/Types All



This is to certify that the aforementioned product is in accordance with the applicable requirements of the following directive(s):

2014/30/EU Electromagnetic Compatibility (EMC)

2014/35/EU Low Voltage Directive 2006/42/EC Machinery Directive

EU 2015/863 Directive, Restricted Substances (RoHS 3)

and has been designed to be in conformity with the applicable requirements of the following standard(s) when installed and used in accordance with the manufacturer's supplied installation instructions.

EN 61010-1:2010/AMD1:2016 Safety Requirements for Electrical Equipment

EN 61800-3:2004/A1:2011 EMC Requirements for Power Drives
IEC 61800-5-1:2016 Electrical Safety for Power Drive Systems
IEC 61800-5-2:2016 Functional Safety for Power Drive Systems

EN 55011:2000/A2:2003 Conducted and Radiated Emissions EN 55022:1998 Conducted and Radiated Emissions

foden fåger

Authorized Representative:

/ Jochen Jäger

Operations Manager Aerotech GmbH

Gustav-Weißkopf-Str. 18

90768 Fürth Germany

Engineer Verifying

Compliance

Clar Robreson / Alex Weibel

Aerotech, Inc. 101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

Date 8/15/2024

UKCA Declaration of Conformity

ManufacturerAerotech, Inc.Address101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

Product iXC4/XC4

Model/Types All



To which this declaration relates, meets the essential health and safety requirements and is in conformity with the relevant UK Legislation listed below:

Electrical Equipment (Safety) Regulations 2016 Electromagnetic Compatibility Regulations 2016 Supply of Machinery (Safety) Regulations 2008

Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Using the relevant section of the following UK Designated Standards and other normative documents when installed in accordance with the installation instructions supplied by the manufacturer.

EN 61010-1:2010/AMD1:2016 Safety Requirements for Electrical Equipment

EN 61800-3:2004/A1:2011 EMC Requirements for Power Drives
IEC 61800-5-1:2016 Electrical Safety for Power Drive Systems
IEC 61800-5-2:2016 Functional Safety for Power Drive Systems

EN 55011:2000/A2:2003 Conducted and Radiated Emissions EN 55022:1998 Conducted and Radiated Emissions

Authorized Representative:

/ Simon Smith

Managing Director Aerotech Ltd

The Old Brick Kiln, Ramsdell, Tadley

Hampshire RG26 5PR

UK

Engineer Verifying

Compliance

Clas Reheard / Alex Weibel

Aerotech, Inc. 101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

Date 8/15/2024

10

Korean Certification



Registration of Broadcasting and Communication Equipments

It is verified that the foregoing equipment has been registered under the Clause 3, Article 58-2 of the radio Waves Act.

Agency Approvals

The iXC4/XC4 drives have been tested by the following NRTL(s) and have been certified to the standards that follow:

Approval: CUS NRTL

Approving Agency: TÜV SÜD America Inc.
Certificate #: U10 068995 0033

Standards: CSA C22.2 No. 61010-1:2012/A1:2018-11,

UL 61010-1:2012/R2019-07

Certificate #: N8AUS 068995 0032

Standards: CE Attestation of Conformity,

Low Voltage Directive 2014/35/EU, EN 61010-1:2010/AMD1:2019

Approval: Safety Components (STO)

Approving Agency: TÜV SÜD

 Certificate #:
 Z10 068995 0030 Rev. 01

 Standards:
 IEC 61508-1:2010 (up to SIL3),

IEC 61508-2:2010 (up to SIL3), ISO 13849-1:2023 (up to PL e), IEC 62061:2021 (maximum SIL 3)



Visit https://www.tuev-sued.de/product-testing/certificates to view Aerotech's TÜV SÜD certificates. Type the certificate number listed above in the search bar or type "Aerotech" for a list of all Aerotech certificates.

Approving Agency: UL

Product Identity: Industrial Control Equipment

 File #:
 E529537

 Standards:
 UL 61800-5-1



Safety Procedures and Warnings

IMPORTANT: This manual tells you how to carefully and correctly use and operate the drive.

 Read all parts of this manual before you install or operate the drive or before you do maintenance to your system.



 To prevent injury to you and damage to the equipment, obey the precautions in this manual.

All specifications and illustrations are for reference only and were complete and accurate
as of the release of this manual. To find the newest information about this product, refer to
www.aerotech.com.

If you do not understand the information in this manual, contact Aerotech Global Technical Support.



IMPORTANT: This product has been designed for light industrial manufacturing or laboratory environments. If the product is used in a manner not specified by the manufacturer:

- The protection provided by the equipment could be impaired.
- The life expectancy of the product could be decreased.

Safety notes and symbols are placed throughout this manual to warn you of the potential risks at the moment of the safety note or if you fail to obey the safety note.



The voltage can cause shock, burn, or death.



You are at risk of physical injury.

You could damage the drive.



A surface can be hot enough to burn you.



Your actions, the temperature of the system, or the condition of the atmosphere that surround the system could start a fire.



Components are sensitive to electrostatic discharge.



Unsecured cables could cause you to:

- trip and fall
- drag the product off of its mounting location
- · damage the cable connections.



A blue circle symbol is an action or tip that you should obey. Some examples include:

- General tip
- Read the manual/section
- Wear protective safety equipment (eye protection, ear protection, gloves)
- If applicable, do not lift unassisted



DANGER: To decrease the risk of electrical shock, injury, death, and damage to the equipment, obey the precautions that follow.

- 1. Before you do maintenance to the equipment, disconnect the electrical power.
- 2. Restrict access to the drive when it is connected to a power source.



- 3. Do not connect or disconnect electrical components, wires, and cables while this product is connected to a power source.
- 4. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
- 5. Supply each operator with the necessary protection from live electrical circuits.
- 6. Make sure that all components are grounded correctly and that they obey the local electrical safety requirements.
- 7. Install the necessary precautions to supply safety and protection to the operator.



DANGER: System travel can cause crush, shear, or pinch injuries. Restrict access to all motor and stage parts while your system is connected to a power source.

WARNING: To prevent damage to the equipment and decrease the risk of electrical shock and injury, obey the precautions that follow.



- 1. Make sure that all system cables are correctly attached and positioned.
- 2. Do not use the cables or the connectors to lift or move this product.
- 3. Use this product only in environments and operating conditions that are approved in this manual.
- 4. Only trained operators should operate this equipment.

Handling and Storage

Unpacking the drive



IMPORTANT: All electronic equipment and instrumentation is wrapped in antistatic material and packaged with desiccant. Ensure that the antistatic material is not damaged during unpacking.

Inspect the shipping container for any evidence of shipping damage. If any damage exists, notify the shipping carrier immediately.

Remove the packing list from the shipping container. Make sure that all the items specified on the packing list are contained within the package.

The documentation for the drive is on the included installation device. The documents include manuals, interconnection drawings, and other documentation pertaining to the system. Save this information for future reference. Additional information about the system is provided on the Serial and Power labels that are placed on the chassis.

The system serial number label contains important information such as the:

- Customer order number (please provide this number when requesting product support)
- · Drawing number
- · System part number

Handling

IMPORTANT: It is the responsibility of the customer to safely and carefully lift and move the drive.



- Be careful when you move or transport the drive.
- Refer to Section 1.5. Mechanical Specifications for dimensions and weight specifications.
- · Retain the shipping materials for future use.
- Transport or store the drive in its protective packaging.



WARNING: Electrostatic Discharge (ESD) Sensitive Components!

You could damage the power supply or drives if you fail to observe the correct ESD practices. Wear an ESD wrist strap when you handle, install, or do service to the system assembly.

Storage


Store the drive in the original shipping container. If the original packaging included ESD protective packaging, make sure to store the drive in it. The storage location must be dry, free of dust, free of vibrations, and flat.

Refer to Section 1.6. Environmental Specifications.

Installation Overview


The images that follow show the order in which to make connections and settings that are typical to the iXC4/XC4. If a custom interconnect drawing was supplied with your system, that drawing is on your Storage Device and shows as a line item on your Sales Order in the Integration section.

Figure 1: Installation Connection Overview for the iXC4

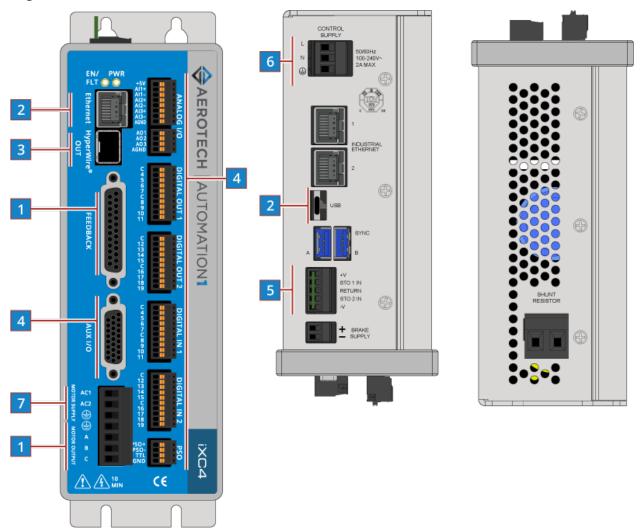

4	Connect the motor to the amplifier Motor Output connector.	Section 2.2.
	Connect the motor to the amplifier Feedback connector.	Section 2.3.
2	Connect the PC to the USB or Ethernet port.	N/A
3	Connect the next drive in the system to the HyperWire Out port.	Section 2.7.
4	Connect additional I/O as required by your application	Section 2.5./
4	(if you purchased the I/O option).	Chapter 3
5	Connect the Safe Torque Off (STO).	Section 2.4.
6	Connect the power supply to the Control Supply connector.	Section 2.1.1.
7	Connect the motor power to the Motor Supply connector.	Section 2.1.2.

Figure 2: Installation Connection Overview for the XC4

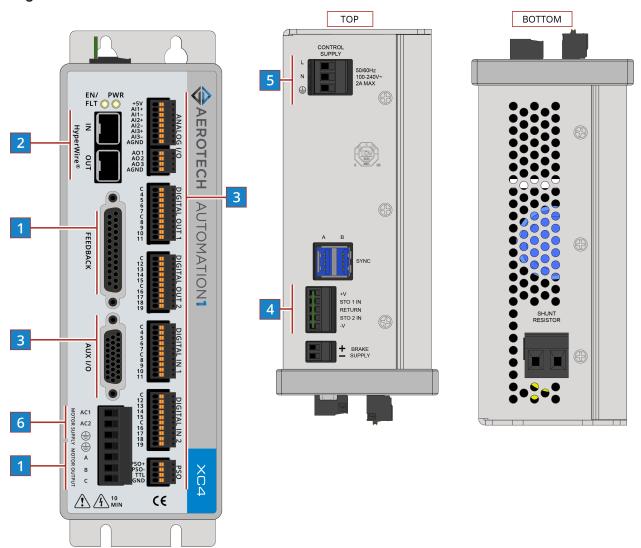

4	Connect the motor to the amplifier Motor Output connector.	Section 2.2.
	Connect the motor to the amplifier Feedback connector.	Section 2.3.
2	Connect a PC or drive-based controller HyperWire port to the HyperWire In port.	Section 2.7.
3	Connect additional I/O as required by your application	Section 2.5./
3	(if you purchased the I/O option).	Chapter 3
4	Connect the Safe Torque Off (STO).	Section 2.4.
5	Connect the power supply to the Control Supply connector.	Section 2.1.1.
6	Connect the motor power to the Motor Supply connector.	Section 2.1.2.

This page intentionally left blank.

Chapter 1: iXC4/XC4 Overview

The iXC4 is a high-performance digital drive-based controller. It runs the Automation1-iSMC controller to generate commands for itself as well as for additional drives on the chain.

The XC4 is a high performance digital drive. The XC4 is based on the HyperWire communication protocol and receives commands from a PC or drive-based controller.

Both drives provide deterministic behavior, auto-identification, and are fully software configurable. A double precision floating point DSP controls the digital PID and current loops. Both drives offer standard Safe Torque Off (STO) inputs and optional Position Synchronized Output (PSO) outputs. And both drives are offered with an optional encoder interpolation feature (-MX1), an auxiliary encoder input for dual loop control, dedicated analog and digital I/O (expandable with the -EB1 option), and separate power connections for motor and control supply voltages.

Figure 1-1: iXC4 Digital Drive-Based Controller Labeled


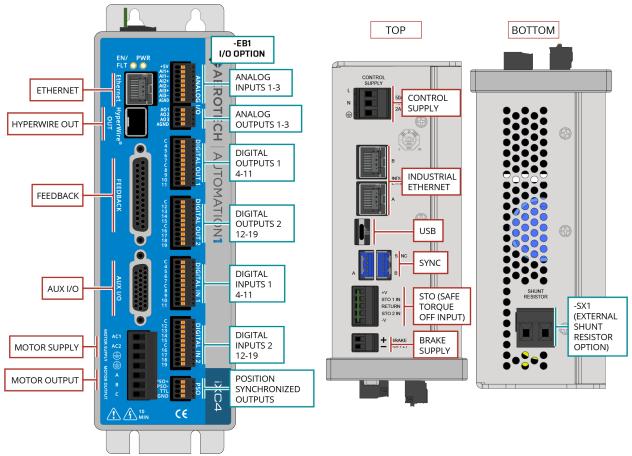


Figure 1-2: XC4 Digital Drive Labeled

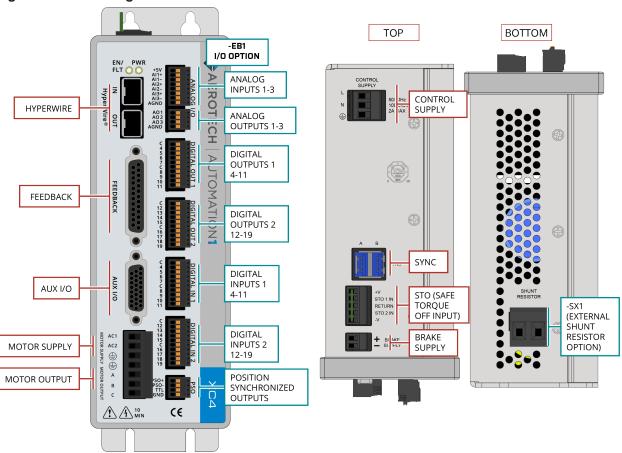

1.1. Feature Summary

- 100-240 VAC control supply inputs (Section 2.1.1.)
- 0-240 VAC motor supply inputs (producing 340 VDC) (Section 2.1.2.)
- 20 kHz Servo Loop Update Rate
- Line driver square wave quadrature encoder input for position and velocity feedback (Section 2.3.1.)
- Absolute Encoder support on the Feedback connector (Section 2.3.1.2.)
- One fail-safe brake output (Section 2.3.6.)
- Two STO sense inputs (Section 2.4.)
- Line driver square wave auxiliary quadrature encoder input or output for PSO (Section 2.5.1.)
- Absolute Encoder support on the Auxiliary I/O connector (Section 2.5.1.2.)
- Four digital user outputs (Section 2.5.3.)
- · Six digital user inputs
 - Four Digital Inputs (Section 2.5.4.)
 - Two High-Speed Inputs (Section 2.5.5.)
- One 16-bit analog output (±10 V) (Section 2.5.6.)
- One 16-bit differential analog input (± 10 V) (Section 2.5.7.)
- Position Synchronized Outputs (PSO):
 - Generate outputs synchronized to feedback positioning (Section 2.5.2.)
 - Part-Speed PSO Firing:
 - One to three axes (one axis is the default)
 - Part-Speed PSO commands high-speed, low-latency output pulses based on the commanded vector velocity. Refer to the online help for more information.
 - Multi-Axis PSO Tracking: To track multiple axes...
 - with Aerotech drives, use the Sync Ports (Section 2.9.)
 - with non-Aerotech drives and square wave encoder signals, use the Auxiliary Encoder connector (Section 2.5.) or use the Primary Feedback connector (Section 2.3.)
- One HyperWire communication channel (Section 2.7.)
- One 10/100/1000 BASE-T Ethernet Port (iXC4 Only)
- One USB 2.0 Type C Port (iXC4 Only)
- Two 100 BASE-T Industrial Ethernet Ports (iXC4 Only)

1.2. Ordering Options


Table 1-1: Example Order and Ordering Options

Example		
Automation1-iXC4-20-EB1-MX1-PSO6-SX1		
Options		
Automation	1 Drive	
XC4	PWM Servo Drive	
iXC4	PWM Servo Drive with Motion Controller	
Peak Currer	nt (Section 1.4.)	
-10	10 A Peak, 5 A Continuous Current	
-20	20 A Peak, 10 A Continuous Current	
-30	30 A Peak, 10 A Continuous Current	
Expansion I	Board (Chapter 3)	
-EB0	No expansion board	
-EB1	 I/O expansion board Three 16-bit analog outputs (±10 V) Three 16-bit differential analog inputs (±10 V) 16 digital logic inputs (5 - 24 VDC), may be connected to current sourcing or sinking devices 16 digital logic outputs (5 - 24 VDC), user defined as current sourcing or sinking Digital logic laser firing (PSO) output 	
Multiplier (S	Section 2.3.1.3.)	
-MX0	No encoder multiplier	
-MX1	Interpolation circuit allowing for analog sine wave input on the primary encoder channel with an interpolation factor of 16,384.	
PSO (Section	n 2.5.2.)	
-PSO1	One-axis PSO firing (includes One-axis Part-Speed PSO)	
-PSO6 Three-axis Part-Speed PSO firing, which uses the PSO firing circuit based off of the commanded vector velocity of 3 or more axes (includes One-Axis PSO).		
External Sh	unt (Section 2.8.)	
-SX0	No connector for the External Shunt	
-SX1	Connection provided for an external shunt resistor network	

1.3. Functional Block Diagram

The block diagram that follows shows a summary of the connector signals.

Figure 1-3: Functional Diagram

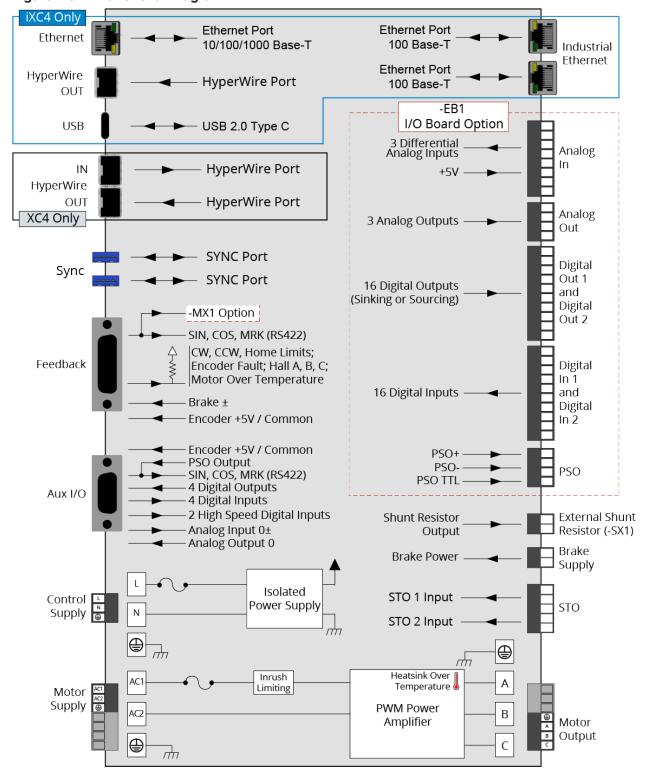

1.4. Electrical Specifications

Table 1-2: Electrical Specifications (Common)

Description		Specification	
	Input Voltage	100-240 VAC (±10%)	
	Input Frequency	50-60 Hz	
Control Supply	Inrush Current	68 A _{PK} @ 240 V	
Control Supply	Input Current	0.5 A _{RMS}	
	Internal Fuse	2 A/250 V, 35 A interrupt rating, L terminal only	
	External Breaker	20 A maximum (Type-C)	
SCCR	·	Suitable for use on a circuit capable of delivering not more than 5,000 rms symmetrical amperes, 240 volts maximum	
Power Amplifier Bandwidth 2500 Hz maximum (software selectable)		2500 Hz maximum (software selectable)	
PWM Switching Frequency		20 kHz	
Minimum Load Inductance		0.5 mH	
User Power Supply Output		5 VDC (@ 500 mA)	
Motor Type		Brushless, Brush, Stepper	
Protective Features		 Output short circuit Peak over current DC bus over voltage Motor RMS over current Motor over temperature Heatsink over temperature Control power supply under voltage IGBT supply under voltage Shunt resistor monitoring 	
Insulation		Over Voltage Category 3	
Conductors		Copper Only, 75 °C ⁽¹⁾	
(1) The wire temperature rating could be higher than 75 °C. The 75 °C reference is for end-use installers when sixing the conductor			

(1) The wire temperature rating could be higher than 75 °C. The 75 °C reference is for end-use installers when sizing the conductors per NFPA 70 NEC (National Electrical Code) where applicable.

Table 1-3: Electrical Specifications (by Ordering Option)

rubio i di Elocuitoni opocimonici	(b) Grading Option,	<i>)</i>	
Output Current Ordering Option	-10	-20	-30
Motor Supply Input Current at full output	5 A	10 A	10 A
power	3 A	10 A	10 A
Motor Supply Input Voltage Max ^(1,2)		240 VAC	
(Vrms AC1 to AC2, +10%)		50/60 Hz	
Output Current (peak) (3)	10 A	20 A	30 A
Output Current (continuous)(3,4)	3.5 A _{RMS}	5.3 A _{RMS}	5.3 A _{RMS}
Internal time delay fuse (AC1 input only)	5 A	10 A	10 A
Peak Output Voltage		340 V	
Maximum Motor Supply External Breaker		20 A maximum (Type-D))
Internal Motor Supply Capacitance	1200 µf		
Capacitor Safe Discharge Time (to 50 V)	10 minutes		
Shunt / Brake Internal Fuse	8 A		
(1) = 11/0.15/0.1			

⁽¹⁾ The iXC4/XC4 uses a single phase motor supply power.

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

⁽²⁾ A Lower motor supply voltage may be used. This will result in a reduction of output power.

⁽³⁾ There are three motor output phases from the drive.

⁽⁴⁾ These values are under full output power. Under a lighter load, the continuous output current capability will be higher.



WARNING: **Electric Shock or Fire Hazard!** A fault current interruption could be the result of an open branch-circuit protective device. To reduce the risk of fire or electric shock, examine the current-carrying parts and other controller components. Replace all damaged parts. If a burnout of the current element of an overload relay occurs, you must replace the complete overload relay.



AVERTISSEMENT: Risque d'électrocution ou d'incendie! Une interruption du courant de défaut peut être provoqué par un dispositif de protection de circuit de dérivation ouvert. Pour réduire le risque d'incendie ou d'électrocution, examinez les pièces conductrices de courant et les autres composants du contrôleur. Remplacer toutes les parties endommagées. Si un grillage de l'élément de courant d'un relais de surcharge se produit, vous devez remplacer le relais de surcharge dans son ensemble.

1.4.1. System Power Requirements

The following equations can be used to determine total system power requirements. The actual power required from the mains supply will be the combination of actual motor power (work), motor resistance losses, and efficiency losses in the power electronics or power transformer. For 3-phase brushless motors:

Use an EfficiencyFactor of approximately 90% in the following equations.

PWM Amplifier Types

```
Power Output [W] = Torque [N·m] · Angular Velocity [rad/sec] ; Rotary  = \text{Force [N]} \cdot \text{Linear Velocity [m/sec]} \quad \text{; Linear}   = B_{\text{emf}} \left[ V_{\text{rms}} \ 1-n \right] \cdot \text{MotorCurrent [A}_{\text{rms}} \right] \cdot 3 \quad \text{; Rotary or Linear}   \text{Power Loss [W]} = \text{MotorCurrent}^2 \left[ A_{\text{rms}}^2 \right] \cdot \text{MotorHotResistance [} \Omega \ 1-1 \right] \cdot 3/2   \text{Power Input [W]} = \text{(Power Output [W]} + \text{Power Loss [W]} ) / \text{EfficiencyFactor}
```

NOTES

```
l-n = line to neutral
l-l = line to line
Vrms = Volt rms
Arms = Ampere rms
Apk = Ampere peak
Vdc = Volt DC
```

1.4.2. Real-Time Clock Requirements (iXC4 Only)

The drive has an internal real-time clock that is used to time-stamp logged data. The clock is powered by an internal capacitor when the control supply is not connected to the drive. When the capacitor is fully charged, it will power the clock for 17.5 days.

If the capacitor is fully discharged, the time on the drive is not reliable. To reinitialize the real-time clock, you must:

- Connect the drive to the control supply. It will take 36 minutes to fully charge the capacitor.
- Connect the drive to the Automation1 Studio and reprogram the real-time clock.

The capacitor charges exponentially with a 7.2 minute time constant. Apply the control supply to charge the capacitor. To achieve the maximum 17.5 days of real-time clock operation in the absence of the control supply, the capacitor must be charged for 36 minutes. If the capacitor is not fully charged when the control supply is lost, the real-time clock will not last the entire 17.5 days on backup capacitor power.

1.5. Mechanical Specifications

1.5.1. Mounting and Cooling

The drive must be installed in an enclosed control cabinet suitable for installation of power equipment. A minimum enclosure rating of IP54 is required to comply with safety standards. Make sure that there is sufficient clearance surrounding the drive for free airflow and for the routing of cables and connections. Consideration for items such as line reactors, line filters, and motor chokes or inductance should be made during the initial cabinet design phase.



IMPORTANT: The amount of airflow required to keep the drive temperature within a sufficient range is dependent on the operating conditions. You could be required to supply additional airflow to the drive.

Table 1-4: Mounting Specifications

		iXC4/XC4
Customer-Supplied Enclosure		IP54 Compliant
Weight		2.4 kg
Mounting Hardware		M4 [#8] screws (four locations, not included)
Mounting Orientation		Vertical (typical)
Dimensions		Refer to Section 1.5.2. Dimensions
Minimum Clearance	Airflow	~25 mm
Willimiditi Clearance	Connectors	~100 mm
Operating Temperature		Refer to Section 1.6. Environmental Specifications
Drive IP Rating		IP20
Mounting Panel Thickness (Recommended)		2.5 - 3.5 mm (.10125 in)
UL Enclosure Type Rating of Drive		Open Type


1.5.2. Dimensions




IMPORTANT: iXC4 and XC4 dimensions are the same. iXC4 is shown.

Figure 1-4: Dimensions



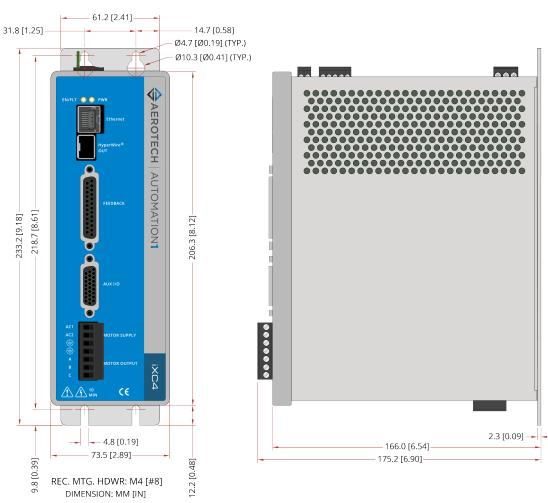


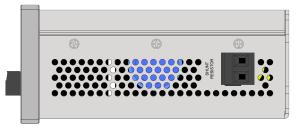



IMPORTANT: iXC4-EB1 and XC4-EB1 dimensions are the same. iXC4-EB1 is shown.

Figure 1-5: Dimensions [-EB1]

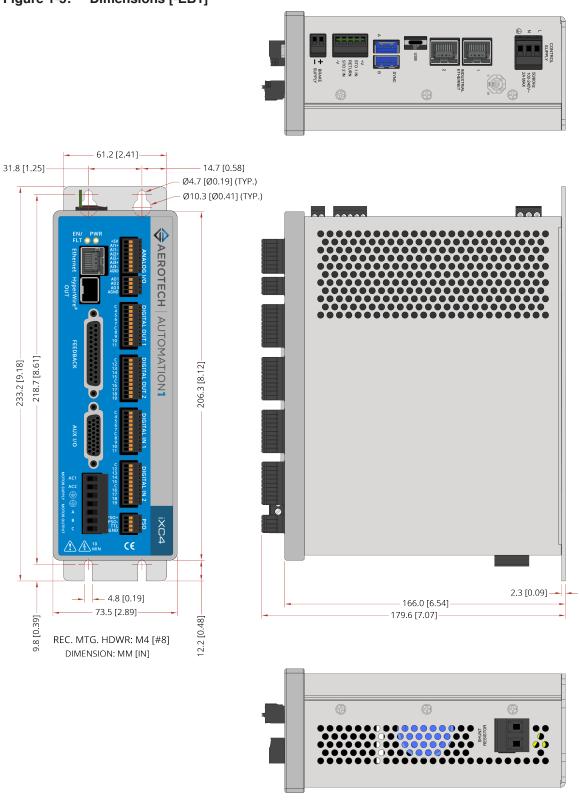

1.6. Environmental Specifications

The environmental specifications are listed below.

Table 1-5: Environmental Specifications

	·
Temperature	Operating: 0 °C to 40 °C (32 °F to 104 °F)
	Maximum Surrounding Air: 40 °C (104 °F)
	Storage: -30 °C to 85 °C (-22 °C to 185 °F)
Humidity	The maximum relative humidity is 80% for temperatures that are less
Non-condensing	than 31 °C and decreases linearly to 50% relative humidity at 40 °C.
Operating Altitude	0 m to 2,000 m (0 ft to 6,562 ft) above sea level.
Pollution	Pollution Degree 2
	Typically only nonconductive pollution occurs.
Operation	Use only indoors

1.7. Drive and Software Compatibility

This table shows the available drives and which version of the software first supported each drive. In the **Last Software Version** column, drives that show a specific version number are not supported after that version.

Table 1-6: Drive and Software Compatibility

Drive Type	Software	First Software Version	Last Software Version
iXC4	Automation1	2.0.0	Current
XC4	Automation1	1.2.0	Current
	A3200	6.04	Current

This page intentionally left blank.

Chapter 2: Installation and Configuration

The sections in this chapter include details on how to set up the electrical and safety components of your system. Obey all safety warnings, including those in Safety Procedures and Warnings.

2.1. Input Power Connections

The drive has two AC input power connectors. One connector is for control power and the other connector is for motor power. For a full list of electrical specifications, refer to Section 1.4. Refer to Section 2.11. for a System Interconnection Drawing.

2.1.1. Control Supply Connector



DANGER: Shock and Fire Hazard

Electrical wiring must be designed and installed in accordance with local electrical safety regulations to prevent the risk of fire and electrical shock.

The Control Supply input supplies power to the communications and logic circuitry of the drive . The **L** input is connected to an internal fuse. Refer to Table 5-4 for the internal fuse value and part number. The **N** input is not internally fused. External protection is required if **N** is not connected to a neutral conductor. A dual pole ganged breaker is recommended to protect the control supply wires. Refer to Table 1-2 for more information.

The Control Supply contains an internal filter but you could be required to add an external filter for CE compliance. Install the external filter as close as possible to the drive. Use a Schaffner FN2080 filter, an Aerotech UFM-ST noise filter module, or equivalent device.

Figure 2-1: Control Supply Connections

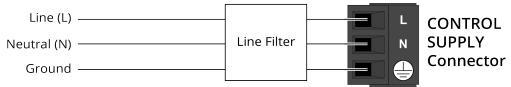


Table 2-1: Control Supply Connector Pinout

Pin	Description
L	Line (L): 100-240 VAC Control Power Input
N	Neutral (N) or 100-240 VAC Control Power Input with external fuse
	Protective Ground

Table 2-2: Control Supply Mating Connector Ratings

Specification	or cappry manning commoner manninge	Description
Туре		3-Pin Terminal Block
Part Numbers		Aerotech: ECK02388
		Phoenix: 1756272
Conductor Cross Section	One conductor, stranded with ferrule and plastic sleeve	1422 AWG (0.252.5 mm ²)
	Two conductors (same cross-section), stranded, twin ferrule with plastic sleeve	1620 AWG (0.51.5 mm ²)
Tightening Torque		0.50.6 N·m
Conductor Insulation Strip Length		7 mm (0.25 in)
(1) Refer to the manufacturer website for additional information.		

2.1.2. Motor Supply Connector



DANGER: Shock and Fire Hazard!



Electrical wiring must be designed and installed in accordance with local electrical safety regulations to prevent the risk of fire and electrical shock.

Motor power is applied to the AC1 and AC2 terminals of the Motor Supply connector.

Peak Current Option -10: The **AC1** input is internally connected to a 5 A fuse.

Peak Current Option -20 and -30: The AC1 input is internally connected to a 10 A fuse.

Refer to Table 5-4 for the internal fuse part numbers.

The AC2 input is not internally fused. The system designer must provide external circuit breaker(s) in accordance with local electrical safety requirements. D-type breakers are required for proper branch protection (refer to Section 1.4.). Individual circuit breakers could be required for each drive in a system. The size of the breaker required is dependent upon the gauge of wire used between the drive and the motor.

The drive contains an internal surge protector (MOV, P/N: P20V385) between the internal motor supply and ground. For hi-pot testing, you will need to temporarily remove JP100 (refer to Figure 5-1).

For CE compliance, connect an AC line filter as close as possible to the drive (refer to Section 2.1.4.).



WARNING: Verify that all ground connections are installed correctly before you apply power to the iXC4/XC4.

Figure 2-2: Motor Supply Connections



Table 2-3: Motor Supply Connector Pinout

Pin	Description
AC1	AC Motor Power Input
AC2	AC Motor Power Input
	Protective Earthing Conductor - 2.5 mm ² / 14 AWG min conductor size

Table 2-4: Motor Supply Mating Connector Ratings

Specification		Description	
Туре		7-Pin Terminal Block	
Part Numbers		Aerotech: ECK02387	
		Phoenix: 1756353	
Conductor Cross Section	One conductor, stranded with ferrule and plastic sleeve	1422 AWG (0.252.5 mm ²)	
	Two conductors (same cross-section), stranded, twin ferrule with plastic sleeve	1620 AWG (0.51.5 mm ²)	
Tightening Torque		0.50.6 N⋅m	
Conductor Insulation Strip Length		7 mm (0.25 in)	
(1) Refer to the manufacturer website for additional information.			

Use these parameters to configure motor overload protection: AverageCurrentThreshold, AverageCurrentTime, and MaxCurrentClamp.

2.1.3. Transformer Options

You can connect an external isolation transformer to the Motor Supply AC Input to reduce the operating voltage of the motor. Using a transformer can also reduce electrical noise.

Table 2-5: Nominal Motor Operating Voltages / Required AC Voltages

AC Voltage	DC Voltage
28	40
56	80
115	160
230	320

Table 2-6: Transformer Options

Transformer	Description
TV0.3-28-56-ST	Generate 28 or 56 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces a 40 or 80 VDC power bus.
TM3	Power up to 4 drives, providing 300 watts of power
TM5	Power up to 4 drives providing 500 watts of power
TV0.3-28	Generate 28 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces a 40 VDC power bus.
TV0.3-56	Generate 56 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces an 80 VDC power bus.
TV1.5, TV2.5, or TV5	1.5 kVA, 2.5 kVA, or 5 kVA isolation transformer; 115/230 VAC input; 28, 43, 56, 70, 115 VAC output

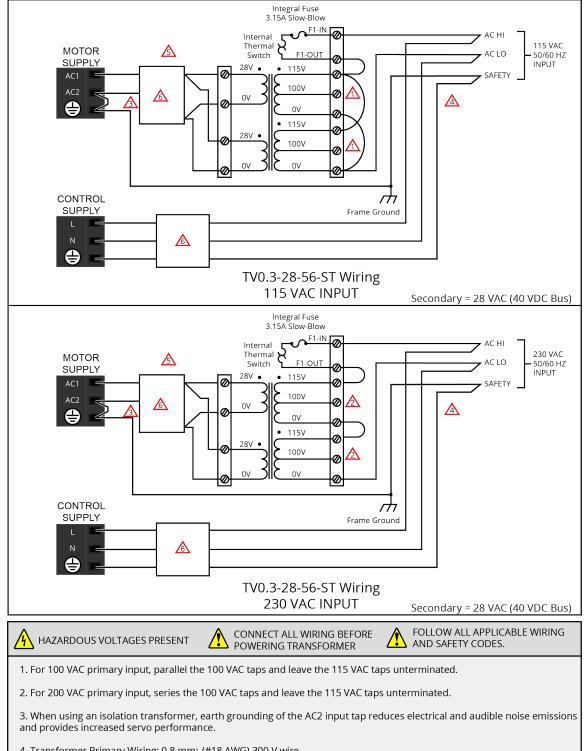


Figure 2-3: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (40 VDC Bus)

- 4. Transformer Primary Wiring: $0.8\ mm^2$ (#18 AWG) 300 V wire.
- 5. Transformer Secondary Wiring: 1.3 mm² (#16 AWG) 300 V wire.
- 6. AC line filters are for CE compliance. Filters may also be located on the primary side of the transformer.

Drawing: 620B1346-8, Rev. -

Integral Fuse 3.15A Slow-Blow F1-IN Internal 115 VAC Thermal **MOTOR** ⅓ Switch 50/60 HZ SUPPLY INPUT 28V • 0 SAFETY 100V AC2 0 ◬ 0V <u> 4</u> 0 0V 115V 0 100V 0 CONTROL **SUPPLY** Frame Ground ◬ TV0.3-28-56-ST Wiring Secondary = 28+28 = 56 VAC (80 VDC Bus) 115 VAC INPUT Integral Fuse 3.15A Slow-Blow **√**F1-IN **Ø** Internal Thermal X 230 VAC **MOTOR** ◬ - 50/60 HZ Switch SUPPLY INPUT 28V • 115V 0 0 0 ◬ ΩV <u> 4</u> 0 0V 115V 0 100V 0 0 CONTROL SUPPLY Frame Ground ◬ TV0.3-28-56-ST Wiring Secondary = 28+28 = 56 VAC (80 VDC Bus) 230 VAC INPUT CONNECT ALL WIRING BEFORE FOLLOW ALL APPLICABLE WIRING HAZARDOUS VOLTAGES PRESENT AND SAFETY CODES. POWERING TRANSFORMER 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Transformer Primary Wiring: 0.8 mm² (#18 AWG) 300 V wire. 5. Transformer Secondary Wiring: 1.3 mm² (#16 AWG) 300 V wire. 6. AC line filters are for CE compliance. Filters may also be located on the primary side of

Figure 2-4: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (80 VDC Bus)

36 www.aerotech.com

the transformer.

Drawing: 620B1346-9, Rev.

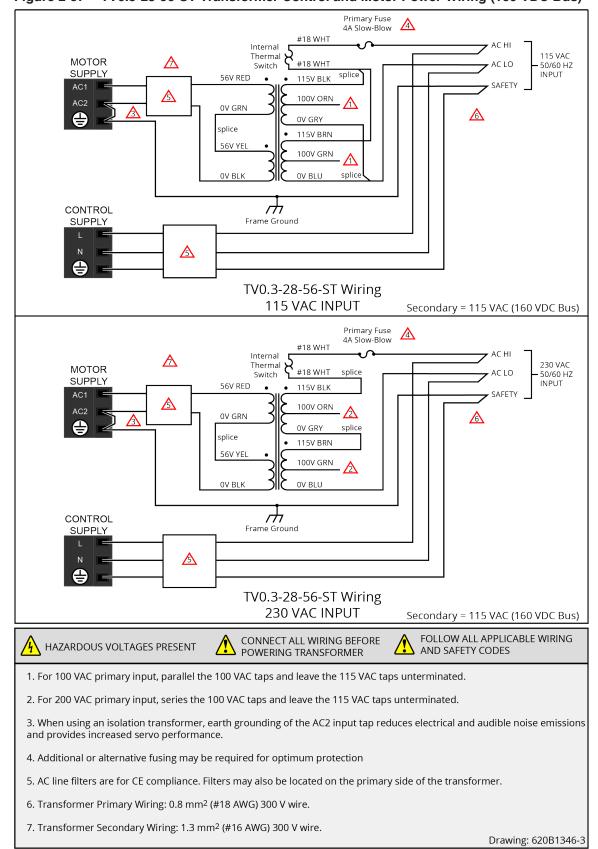


Figure 2-5: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (160 VDC Bus)

4A Slow-Blow #18 WHT Internal 115 VAC \triangle Thermal **MOTOR** Switch #18 WHT AC LO 50/60 HZ SUPPLY INPUT 28V RED 115V BLK 100V ORN 0V GRN ◬ 0V GRY 115V BRN 28V YEL 100V GRN splice 0V BLK OV BLU CONTROL ולו SUPPLY Frame Ground ◬ TV0.3-28 Wiring 115 VAC INPUT Secondary = 28 VAC (40 VDC Bus) Primary Fuse 4A Slow-Blow #18 WHT AC HI Internal 230 VAC \triangle Thermal **MOTOR** #18 WHT splice Switch AC LO -50/60 HZ SUPPLY INPUT 28V RED 115V BLK SAFETY 100V ORN AC2 ◬ 0V GRN ◬ **OV GRY** splice 115V BRN 28V YEL 100V GRN 0V BLK 0V BLU CONTROL רלו **SUPPLY** Frame Ground <u> 1</u> TV0.3-28 Wiring 230 VAC INPUT Secondary = 28 VAC (40 VDC Bus) FOLLOW ALL APPLICABLE WIRING CONNECT ALL WIRING BEFORE **人** HAZARDOUS VOLTAGES PRESENT AND SAFETY CODES. POWERING TRANSFORMER 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Additional or alternative fusing may be required for optimum protection 5. AC line filters are required for CE compliance. Filters may also be located on the primary side of the transformer. 6. Transformer Primary Wiring: 0.8 mm² (#18 AWG) 300 V wire.

Figure 2-6: TV0.3-28 Transformer Control and Motor Power Wiring (40 VDC Bus)

38 www.aerotech.com

Drawing: 620B1346-1

7. Transformer Secondary Wiring: 1.3 mm² (#16 AWG) 300 V wire.


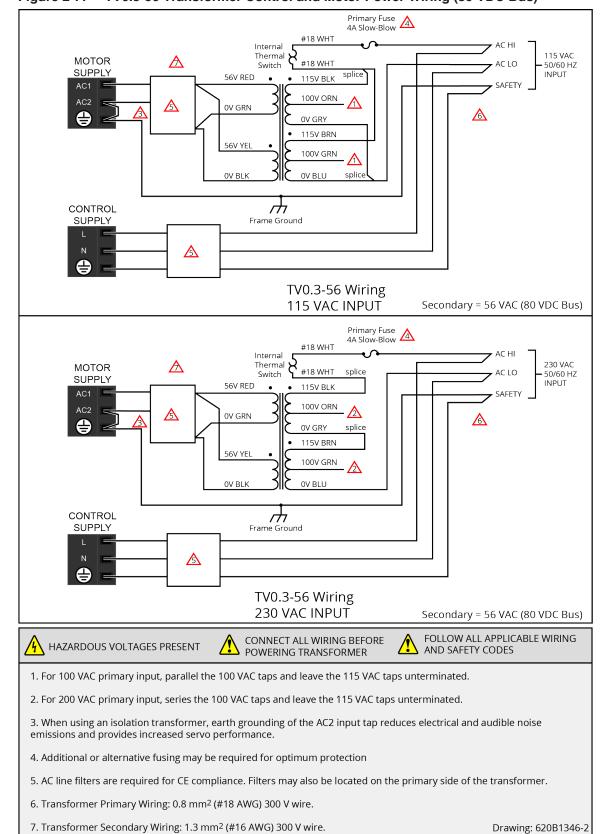


Figure 2-7: TV0.3-56 Transformer Control and Motor Power Wiring (80 VDC Bus)

TM3/TM5 TRANSFORMER MODULE MOTOR SUPPLY MOTOR SUPPLY AC2 CONTROL CONTROL AC2 SUPPLY **(** 1 1st Drive 3rd Drive MOTOR MOTOR SUPPLY SUPPLY AC1 CONTROL SUPPLY CONTROL SUPPLY AC2 ⊕ 4th Drive 2nd Drive 24VDC 4A MAX

Figure 2-8: TM3/TM5 Transformer Control and Motor Power Wiring

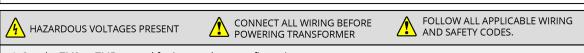

1. See the TM3 or TM5 manual for input voltage configuration

TM3 SHOWN

- 2. Wiring Specifications: 1.3 mm^2 (#16 AWG) 300 V wire.
- 3. Control Supply output voltage (115 VAC in this example) is always the same as the AC Input Voltage to the unit.

2.1.4. Minimizing Noise for EMC/CE Compliance



IMPORTANT: The iXC4/XC4 is a component designed to be integrated with other electronics. EMC testing must be conducted on the final product configuration.

To reduce electrical noise, observe the following motor feedback and input power wiring techniques.

- 1. Use shielded cable for motor and feedback connectors. Connect the shield to the backshell.
- Separate motor and power wiring from encoder and I/O wiring.
- 3. Mount drives, power supplies, and filter components on a conductive panel. Mount line filters close to the drive to keep the wire length between the drive and filter to a minimum. Use a line filter, such as Aerotech's UFM-ST, on the Motor Supply and Control Supply AC inputs.
- 4. Use the lowest motor voltage required by the application to reduce radiated emission.
- 5. Use an isolation transformer with grounded secondary to keep the effects of high frequency PWM amplifier currents to a minimum.
- 6. Use a separate wire for each ground connection to the drive. Use the shortest possible wire length.

The following additional changes could be required for EMC compliance and are recommended during initial EMC system evaluation.

- 1. Add a clamp-on ferrite to the feedback cable close to the drive. [Aerotech PN ECZ02348, Fair-rite PN 0446167281]
- 2. Add a clamp-on ferrite to the Motor Supply and Control Supply wires, including the ground wire, close to the drive.
 - [Aerotech PN ECZ02347, Fair-rite PN 0446164281]
- Add a ferrite core to the UFM-ST AC input wires. Wrap the AC wires and ground wire around the core one time.
 - [Ferrite core: Aerotech PN ECZ02350, Fair-rite PN 2646102002]
- Add a ferrite core to the motor phase and ground wires close to the drive. Wrap all four wires around the ferrite core once. Remove ferrite beads from Aerotech supplied cables if installed. [Ferrite core: Aerotech PN ECZ02349, Fair-rite PN 2646626402]
- 5. Install a motor filter module MFM10-1 close to the drive. The ferrite core that you added to the motor phase and ground wires should be located between the drive and the MFM10-1.

For typical system interconnections, refer to Section 2.11. System Interconnection.

2.2. Motor Power Output Connector



DANGER: Before you do maintenance to the equipment, disconnect the electrical power. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.

The drive can be used to drive the following motor types:

- Brushless (refer to Section 2.2.1.)
- DC Brush (refer to Section 2.2.2.)
- Stepper (refer to Section 2.2.3.)

For a complete list of electrical specifications, refer to Section 1.4.



DANGER: Shock and Fire Hazard

Electrical wiring must be designed and installed in accordance with local electrical safety regulations to prevent the risk of fire and electrical shock.

Table 2-7: Motor Power Output Connector Pinout

Pin	Description	Connector
	Motor Ground	AC1 MOTOR SU
А	Motor Phase A Output	JPPLY N
В	Motor Phase B Output	A A
С	Motor Phase C Output	В С

Table 2-8: Motor Power Output Mating Connector Ratings

Specification		Description
Туре		7-Pin Terminal Block
Part Numbers		Aerotech: ECK02387
		Phoenix: 1756353
Conductor Cross Section	One conductor, stranded with ferrule and plastic sleeve	1422 AWG (0.252.5 mm ²)
	Two conductors (same cross-section), stranded, twin ferrule with plastic sleeve	1620 AWG (0.51.5 mm ²)
Tightening Torque		0.50.6 N⋅m
Conductor Insulation Strip Length		7 mm (0.25 in)
(1) Refer to the manufacturer website for additional information.		

2.2.1. Brushless Motor Connections

The configuration in Figure 2-9 shows a typical brushless motor connection.

Figure 2-9: Brushless Motor Configuration

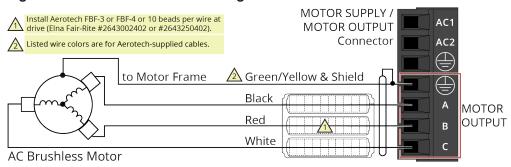


Table 2-9: Wire Colors for Aerotech-Supplied Brushless Motor Cables

Pin	Wire Color Set 1 ⁽¹⁾	Wire Color Set 2	Wire Color Set 3	Wire Color Set 4
)	Green/Yellow &	Green/Yellow &	Green/Yellow &	Green/Yellow &
	Shield (2)	Shield	Shield	Shield
Α	Black	Blue & Yellow	Black #1	Black & Brown
B Red Red & Orange Black #2 Red & Orange		Red & Orange		
C White White & Brown Black #3 Violet & Blue				
(1) Wire Color Set #1 is the wire set typically used by Aerotech.				

^{(2) &}quot;&" indicates two wires (Red & Orange); " / " indicates a single wire (Green/White).

Brushless motors are commutated electronically by the controller. The use of Hall effect devices for commutation is recommended.

The controller requires that the Back-EMF of each motor phase be aligned with the corresponding Hall-effect signal. To ensure proper alignment, motor, Hall, and encoder connections should be verified using one of the following methods: *powered*, through the use of a test program; or *unpowered* using an oscilloscope. Both methods will identify the A, B, and C Hall/motor lead sets and indicate the correct connections to the controller. Refer to Section 2.2.1.1. for powered motor phasing or Section 2.2.1.2. for unpowered motor and feedback phasing.

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.

A motor filter module such as the MFM10 can be installed between the drive and the motor, which will reduce the level of PWM amplifier related current spikes in the system.


2.2.1.1. Brushless Motor Powered Motor and Feedback Phasing

Observe the state of the encoder and Hall-effect device signals in the Diagnostics section of the Status Utility.

Table 2-10: Hall Signal Diagnostics

Hall-Signal Status	Definition
	0 V or logic low
ON	5 V or logic high

Figure 2-10: Positive Motor Direction

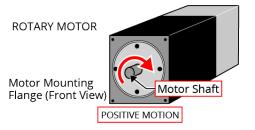

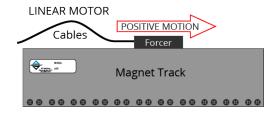



Figure 2-11: Encoder and Hall Signal Diagnostics

) Axes	Data highlighted in blue h	as not been updated.			
Axis Status	Item	X	Υ	Z	U
Diagnostics	Status				
Drive Info	Position Feedback	0000000000000	0000000000000	0000000000000	0000000000
Drive Status	Position Calibration All	0000000000000	0000000000000	0000000000000	0000000000
Fault	Position Camming/Gearing	0000000000000	0000000000000	0000000000000	0000000000
Primary Feedback Status	Primary Feedback	0000000000000	00000000000000	0000000000000	0000000000
) Tasks	Auxiliary Feedback	0000000000000	00000000000000	0000000000000	0000000000
Task Mode	Gantry Marker Difference	0.0000	0.0000	0.0000	0.0
Task Status 0	Analog Input 0	0.0000	0.0000	0.0000	0.0
Task Status 1	Analog Input 1	0.0000	0.0000	0.0000	0.0
Task Status 2	Analog Input 2	0.0000	0.0000	0.0000	0.0
Tasks	Analog Input 3	0.0000	0.0000	0.0000	0.0
ontroller ata Collection	Digital Input 15:0	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0
rive Nodes	Digital Input 31:16	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0
thernet	Digital Output 15:0	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000
vperWire	Digital Output 31:16	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000 0000	0000 0000 0000
урстине	Average Velocity Feedback	0000000000000	0000000000000	0000000000000	000000000
	Current Feedback	0.0000	0.0000	0.0000	0.0
	Transition Offset Errors	0	0	0	
	Hardware				
	Enable				
	CW				
	CCW				
	Home				
	Marker				
	Hall A				
	Hall B				
	Hall C				
	ESTOP				
	Brake				

2.2.1.2. Brushless Motor Unpowered Motor and Feedback Phasing


Disconnect the motor from the controller and connect the motor in the test configuration shown in Figure 2-12. This method will require a two-channel oscilloscope, a 5V power supply, and six resistors (10,000 ohm, 1/4 watt). All measurements should be made with the probe common of each channel of the oscilloscope connected to a neutral reference test point (TP4, shown in Figure 2-12). Wave forms are shown while moving the motor in the positive direction.

Figure 2-12: Brushless Motor Phasing Oscilloscope Example

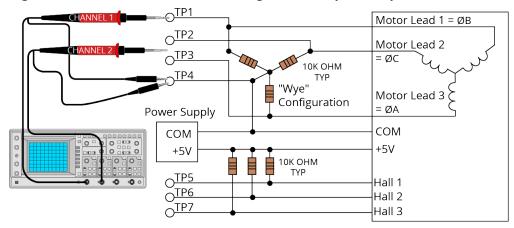

With the designations of the motor and Hall leads of a third party motor determined, the motor can now be connected to an Aerotech system. Connect motor lead A to motor connector A, motor lead B to motor connector B, and motor lead C to motor connector C. Hall leads should also be connected to their respective feedback connector pins (Hall A lead to the Hall A feedback pin, Hall B to Hall B, and Hall C to Hall C). The motor is correctly phased when the Hall states align with the Back EMF as shown in Figure 2-13. Use the CommutationOffset parameter to correct for Hall signal misalignment.

Figure 2-13: Brushless Motor Phasing Goal

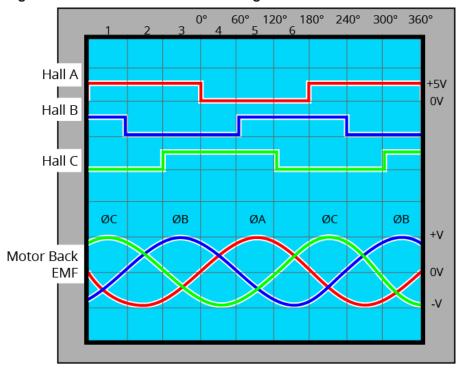

2.2.2. DC Brush Motor Connections

The configuration shown in Figure 2-14 is an example of a typical DC brush motor connection. Refer to Section 2.2.2.1. for information on motor phasing.

Figure 2-14: DC Brush Motor Configuration

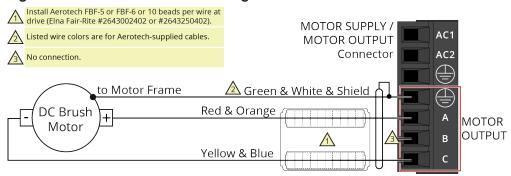


Table 2-11: Wire Colors for Aerotech-Supplied DC Brush Motor Cables


Pin	Wire Color Set 1 ⁽¹⁾	Wire Color Set 2	Wire Color Set 3	
	Green & White & Shield (2)	Green/Yellow & Shield	Green/Yellow & Shield	
Α	Red & Orange	Red	Red & Orange	
С	C Yellow & Blue Black Yellow & Blue		Yellow & Blue	
(1) Wire Color Set #1 is the typical wire set used by Aerotech. (2) "&" (Red & Orange) indicates two wires; "/" (Green/White) indicates a single wire.				

2.2.2.1. DC Brush Motor Phasing

A properly phased motor means that the positive motor lead should be connected to the ØA motor terminal and the negative motor lead should be connected to the ØC motor terminal. To determine if the motor is properly phased, connect a voltmeter to the motor leads of an un-powered motor:

- 1. Connect the positive lead of the voltmeter to the one of the motor terminals.
- 2. Connect the negative lead of the voltmeter to the other motor terminal.
- 3. Move or rotate the motor in the positive or clockwise (CW) direction by hand.

Figure 2-15: Positive Motor Direction

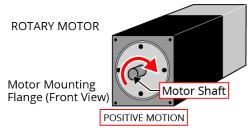

- 4. If the voltmeter indicates a negative value, swap the motor leads and move the motor by hand in the positive direction, again. When the voltmeter indicates a positive value, the motor leads have been identified.
- 5. Connect the motor lead from the positive lead of the voltmeter to the ØA motor terminal on the drive. Connect the motor lead from the negative lead of the voltmeter to the ØC motor terminal on the drive.

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.

2.2.3. Stepper Motor Connections

The configuration shown in Figure 2-16 is an example of a typical stepper motor connection. Refer to Section 2.2.3.1. for information on motor phasing.

In this case, the effective motor voltage is half of the applied bus voltage. For example, an 80 V motor bus supply is needed to get 40 V across the motor.

Figure 2-16: Stepper Motor Configuration

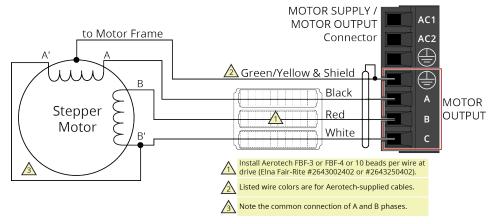


Table 2-12: Wire Colors for Aerotech-Supplied Stepper Motor Cables

	and colors to the capping a cappe		
Pin	Wire Color Set 1 ⁽¹⁾	Wire Color Set 2	
	Green/Yellow & Shield (2)	Green/Yellow & Shield	
Α	Black	Brown	
В	Red	Yellow	
С	White	White & Red	
(1) Wire Color Set #1 is the typical wire set used by Aerotech.			
(2) "&" (Red & Orange) indicates two wires; "/" (Green/White) indicates a single wire.			

2.2.3.1. Stepper Motor Phasing


A stepper motor can be run with or without an encoder.

Without an Encoder: You do not need to phase the motor.

With an Encoder: Because the end of travel (EOT) limit inputs are relative to motor rotation, it is important to phase the motor.

Run a positive motion command. The motor is phased correctly if there is a positive scaling factor (determined by the ServoLoopSetup parameter) and the motor moves in a clockwise direction when you view the motor from the front mounting flange (Figure 2-17). If the motor moves in a counterclockwise direction, reverse the motor leads and re-run the command. After the motor has been phased, if you want to change the direction of positive motion, use the ReverseMotionDirection parameter.

Figure 2-17: Positive Motor Direction

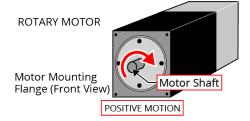

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.


2.2.4. Three Phase Stepper Motor Connections



IMPORTANT: This feature is only supported in Automation1 software version 2.2.0. or later.

The configuration shown in Figure 2-18 is an example of a typical three phase stepper motor connection. Refer to Section 2.2.4.1. for information on motor phasing.

Figure 2-18: Three Phase Stepper Motor Configuration

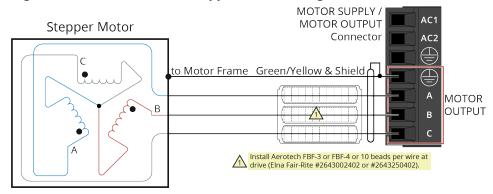

2.2.4.1. Stepper Motor Phasing


A three phase stepper motor can be run with or without an encoder.

Without an Encoder: You do not need to phase the motor.

With an Encoder: Because the end of travel (EOT) limit inputs are relative to motor rotation, it is important to phase the motor.

Run a positive motion command. The motor is phased correctly if there is a positive scaling factor (determined by the ServoLoopSetup parameter) and the motor moves in a clockwise direction when you view the motor from the front mounting flange (Figure 2-19). If the motor moves in a counterclockwise direction, reverse the motor leads and re-run the command. After the motor has been phased, if you want to change the direction of positive motion, use the ReverseMotionDirection parameter.

Figure 2-19: Positive Motor Direction

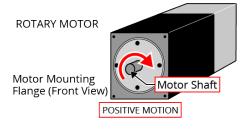

2.3. Feedback Connector

The connector pin assignment is shown in Table 2-13 with detailed connection information in the following sections.

Table 2-13: Feedback Connector Pinout

Pin#	Description	In/Out/Bi	Connector		
1	Reserved	N/A			
2	Motor Over Temperature Thermistor	Input			
3	+5V Power (1)	Output			
4	Plug and Play Serial Data (for Aerotech stages only)	Bidirectional			
5	Hall-Effect Sensor B (brushless motors only)	Input			
6	Encoder Marker Reference Pulse -	Input			
O	Absolute Encoder Clock -	Output			
7	Encoder Marker Reference Pulse +	Input	1 14		
,	Absolute Encoder Clock +	Output			
8	Absolute Encoder Data -	Bidirectional			
9	Reserved	N/A			
10	Hall-Effect Sensor A (brushless motors only)	Input			
11	Hall-Effect Sensor C (brushless motors only)	Input			
12	Clockwise End of Travel Limit	Input			
13	Brake Output -	Output			
14	Encoder Cosine +	Input			
15	Encoder Cosine -	Input			
16	+5V Power (1)	Output			
17	Encoder Sine +	Input			
18	Encoder Sine -	Input	13 25		
19	Absolute Encoder Data+	Bidirectional			
20	Signal Common	Output			
21	Signal Common	Output			
22	Home Switch Input	Input			
23	Encoder Fault Input	Input			
24	Counterclockwise End of Travel Limit	Input			
25	Brake Output +	Output			
(1) The r	(1) The maximum combined current output is 500 mA.				

Table 2-14: Feedback Mating Connector Ratings

Specification	25-Pin Solder Cup	Backshell	
Aerotech Part Number	ECK00101	ECK00656	
Amphenol Part Number (1)	DB25P064TXLF	17E-1726-2	
Maximum Wire Size 20 AWG (0.5 mm²) N/A			
(1) Refer to the manufacturer website for additional information.			

2.3.1. Primary Encoder Inputs

The primary encoder inputs are accessible through the Feedback connector. Use the PrimaryFeedbackType [A3200: PositionFeedbackType or VelocityFeedbackType] parameter to configure the drive to accept an encoder signal type.

Square Wave encoder signals: Section 2.3.1.1.

Absolute encoder signals: Section 2.3.1.2.

Sine Wave encoder signals (as permitted by the multiplier option): Section 2.3.1.3.

You cannot use a sine wave encoder with the -MX1 multiplier option as an input to the PSO. The -MX1 option does not generate emulated quadrature signals.

Refer to Section 2.3.1.4. for encoder feedback phasing.

Refer to Section 2.5. for the auxiliary encoder on the Aux I/O connector.

Table 2-15: Multiplier Options

Option	Primary Encoder Accepts	Auxiliary Encoder Accepts
-MX0	Square Wave or Absolute encoders	Square Wave or Absolute encoders
-MX1	Sine Wave, Square Wave, or Absolute encoders	Square Wave or Absolute encoders



IMPORTANT: Physically isolate the encoder wiring from motor, AC power, and all other power wiring

Table 2-16: Primary Encoder Pins on the Feedback Connector

Pin#	Description	In/Out/Bi
3	+5V Power ⁽¹⁾	Output
6	Encoder Marker Reference Pulse -	Input
O	Absolute Encoder Clock -	Output
7	Encoder Marker Reference Pulse +	Input
,	Absolute Encoder Clock +	Output
8	Absolute Encoder Data -	Bidirectional
14	Encoder Cosine +	Input
15	Encoder Cosine -	Input
16	+5V Power ⁽¹⁾	Output
17	Encoder Sine +	Input
18	Encoder Sine -	Input
19	Absolute Encoder Data+	Bidirectional
20	Signal Common	Output
21	Signal Common	Output
(1) The n	naximum combined current output is 500 mA.	


2.3.1.1. Square Wave Encoder (Primary)

The drive accepts RS-422 square wave encoder signals. The drive will generate a feedback fault if it detects an invalid signal state caused by an open or shorted signal connection. Use twisted-pair wiring for the highest performance and noise immunity.

Table 2-17: Square Wave Encoder Specifications

Specification	Value
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

Figure 2-20: Square Wave Encoder Schematic (Feedback Connector)

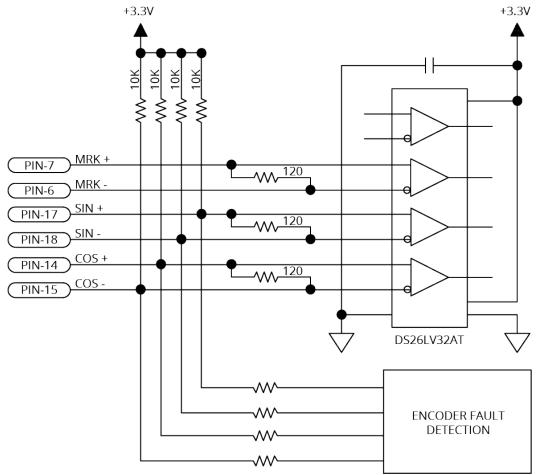

2.3.1.2. Absolute Encoder (Primary)

The drive retrieves absolute position data along with encoder fault information through a serial data stream from the absolute encoder. Use twisted-pair wiring for the highest performance and noise immunity. You cannot echo an absolute encoder signal.


Refer to Figure 2-21 for the serial data stream interface.

Refer to the Help file for information on how to set up your EnDat, BiSS, or SSI absolute encoder parameters.

Table 2-18: Absolute Encoder Specifications

Specification	Value
Sampling Frequency	20 kHz
Maximum Reading Speed Refer to your encoder data sheet.	

Figure 2-21: Absolute Encoder Schematic (Feedback Connector)

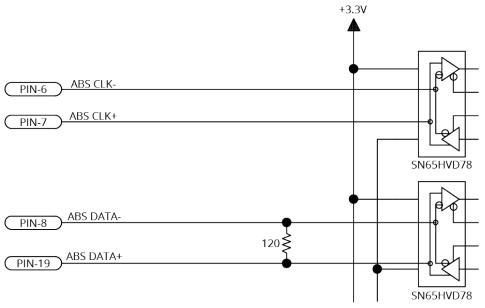

2.3.1.3. Sine Wave Encoder (Primary) [-MX1 Option]

The Sine Wave Encoder option provides higher positioning resolution by subdividing the fundamental output period of the encoder into smaller increments. The amount of subdivision is specified by the PrimaryEncoderMultiplicationFactor [A3200: EncoderMultiplicationFactor] parameter. Use Encoder Tuning [A3200: Feedback Tuning] to adjust the value of the gain, offset, and phase balance controller parameters to get the best performance. For more information, refer to the Help file.

High resolution or high-speed encoders can require increased bandwidth for correct operation. Use the High Speed Mode of the PrimaryEncoderMultiplierSetup [A3200: EncoderMultiplierSetup] parameter to enable the high bandwidth mode. Because this mode increases sensitivity to system noise, use it only if necessary.


You cannot use a sine wave encoder with the -MX1 multiplier option as an input to the PSO. The -MX1 option does not generate emulated quadrature signals.

For the highest performance, use twisted pair double-shielded cable with the inner shield connected to signal common and the outer shield connected to frame ground. Do not join the inner and outer shields in the cable.

Table 2-19: Sine Wave Encoder Specifications

Specification	Value
Input Frequency (max)	450 kHz, 2 MHz
Input Amplitude (1)	0.6 to 1.75 Vpk-pk
Interpolation Factor (max)	16,384
Input Common Mode 1.5 to 3.5 VDC	
(1) Measured as SIN(+) - SIN(-) or COS(+) - COS(-)	

Figure 2-22: Sine Wave Encoder Phasing Reference Diagram

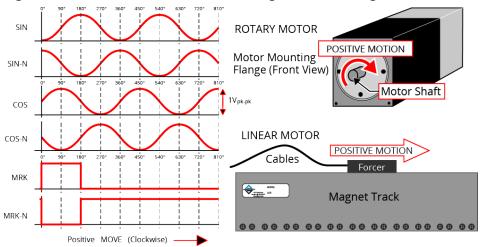

PIN-17 SIN+

120Ω

PIN-18 SIN
120Ω

PIN-15 COS
PIN-7 MRK+

PIN-6 MRK-

Figure 2-23: Sine Wave Encoder Schematic (Feedback Connector)


54

2.3.1.4. Encoder Phasing

Incorrect encoder polarity will cause the system to fault when enabled or when a move command is issued. Figure 2-24 illustrates the proper encoder phasing for clockwise motor rotation (or positive forcer movement for linear motors). To verify, move the motor by hand in the CW (positive) direction while observing the position of the encoder in the diagnostics display (see Figure 2-25).

For dual loop systems, the velocity feedback encoder is displayed in the diagnostic display (Figure 2-25).


Figure 2-24: Encoder Phasing Reference Diagram (Standard)

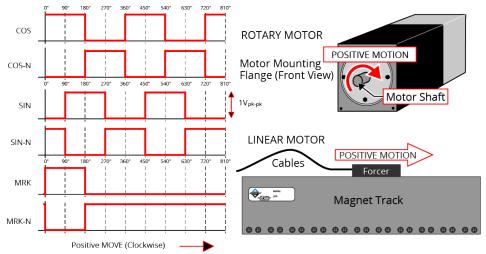



IMPORTANT: Encoder manufacturers may refer to the encoder signals as A, B, and Z. The proper phase relationship between signals is shown in Figure 2-24.

Figure 2-25: Position Feedback in the Diagnostic Display

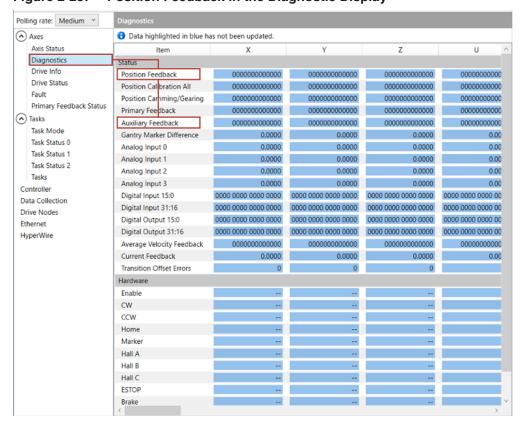

2.3.2. Hall-Effect Inputs


The Hall-effect switch inputs are recommended for AC brushless motor commutation but not absolutely required. The Hall-effect inputs accept 5 VDC level signals. Hall states (0,0,0) or (1,1,1) are invalid and will generate a "Hall Fault" axis fault.

Refer to Section 2.2.1.1. for Hall-effect device phasing.

Table 2-20: Hall-Effect Feedback Pins on the Feedback Connector

Pin#	Description	In/Out/Bi	
3	+5V Power (1)	Output	
5	Hall-Effect Sensor B (brushless motors only)	Input	
10	10 Hall-Effect Sensor A (brushless motors only) Input		
11	1 Hall-Effect Sensor C (brushless motors only) Input		
16	16 +5V Power ⁽¹⁾ Output		
20	20 Signal Common Output		
21	21 Signal Common Output		
(1) The maximum combined current output is 500 mA.			

Figure 2-26: Hall-Effect Inputs Schematic (Feedback Connector)

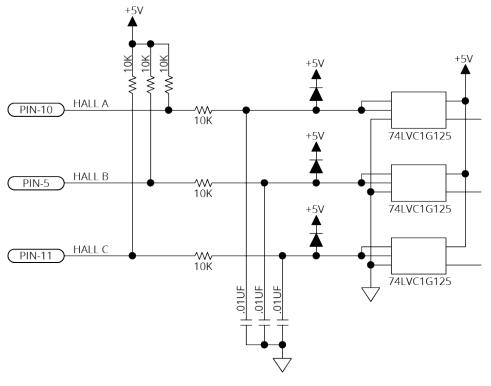

2.3.3. Thermistor Input


The thermistor input is used to detect a motor over temperature condition by using a positive temperature coefficient sensor. As the temperature of the sensor increases, so does the resistance. Under normal operating conditions, the resistance of the thermistor is low which will result in a low input signal. As the increasing temperature causes the resistance of the thermistor to increase, the sensor will trigger an over temperature fault.

The thermistor is connected between Pin 2 and Signal Common. The nominal trip value of the sensor is 1.385 k Ω . The circuit includes a 12 k Ω internal pull-up resistor which corresponds to a trip voltage of +0.52 V.

Table 2-21: Thermistor Input Pin on the Feedback Connector

Pin #	Description	In/Out/Bi
2	Motor Over Temperature Thermistor	Input

Figure 2-27: Thermistor Input Schematic (Feedback Connector)

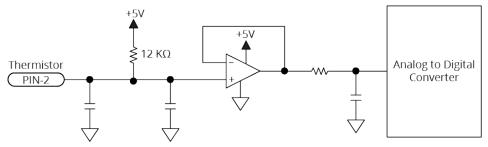

2.3.4. Encoder Fault Input


The encoder fault input is for use with encoders that have a fault output. This is provided by some manufacturers and indicates a loss of encoder function. The active state of this input is parameter configurable and the controller should be configured to disable the axis when the fault level is active.

The nominal trip voltage of the encoder fault input is +2.5 V.

Table 2-22: Encoder Fault Input Pin on the Feedback Connector

Pin #	Description	In/Out/Bi
23	Encoder Fault Input	Input

Figure 2-28: Encoder Fault Input Schematic (Feedback Connector)

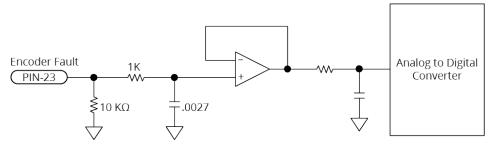

2.3.5. End of Travel and Home Limit Inputs

End of Travel (EOT) limits are required to define the end of the physical travel on linear axes. Positive or clockwise motion is stopped by the clockwise (CW) end of travel limit input. Negative or counterclockwise motion is stopped by the counterclockwise (CCW) end of travel limit input. The Home Limit switch can be parameter configured for use during the home cycle, however, the CW or CCW EOT limit is typically used instead. All of the end-of-travel limit inputs accept 0-24 VDC level signals. Limit directions are relative to the encoder polarity in the diagnostics display (refer to Figure 2-31).

Table 2-23: End of Travel and Home Limit Pins on the Feedback Connector

Pin #	Description	In/Out/Bi	
12	Clockwise End of Travel Limit	Input	
16	+5V Power (1)	Output	
20	Signal Common	Output	
21 Signal Common Output		Output	
22 Home Switch Input Input		Input	
24	24 Counterclockwise End of Travel Limit Input		
(1) The maximum combined current output is 500 mA.			

The active state (High/Low) of the EOT limits is software selectable (by the EndOfTravelLimitSetup axis parameter). Figure 2-29 shows the possible wiring configurations for normally-open and normally-closed switches and the parameter setting to use for each configuration.




IMPORTANT: Use NPN-type normally-closed limit switches (Active High) to provide fail-safe behavior in the event of an open circuit.

ACTIVE HIGH ACTIVE LOW Typical (Normally Closed and Active High) +5V PIN-16 +5V PIN-16 \times **≥**10K **≥**10K CW LMT PIN-12 CW LMT **NORMALLY CLOSED** ₹10K \$10K \$10K ₹1K HM LMT PIN-22 HM LMT **≶**1K LMT COM PIN-20 LMT COM **NPN Switches PNP Switches** +5V PIN-16 +5V PIN-16 **≥**10K **≥**10K CW LMT PIN-12 CW LMT PIN-12 **NORMALLY OPEN** ₹10K **≥**10K \$10K \$10K ≥1K **≶**1K LMT COM PIN-20 **PNP Switches NPN Switches**

Figure 2-29: End of Travel and Home Limit Input Connections


Figure 2-30: End of Travel and Home Limit Input Schematic (Feedback Connector)

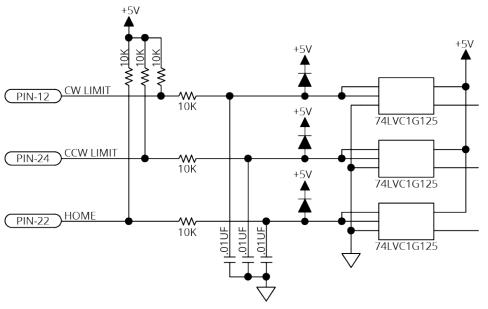

2.3.5.1. End of Travel and Home Limit Phasing

If the EOT limits are reversed, you will be able to move further into a limit but be unable to move out. To correct this, swap the connections to the CW and CCW inputs at the Feedback connector or swap the CW and CCW limit functionality in the software using the EndOfTravelLimitSetup parameter. View the logic level of the EOT limit inputs in the Diagnostics display (shown in Figure 2-31).

Figure 2-31: End of Travel and Home Limit Input Diagnostic Display

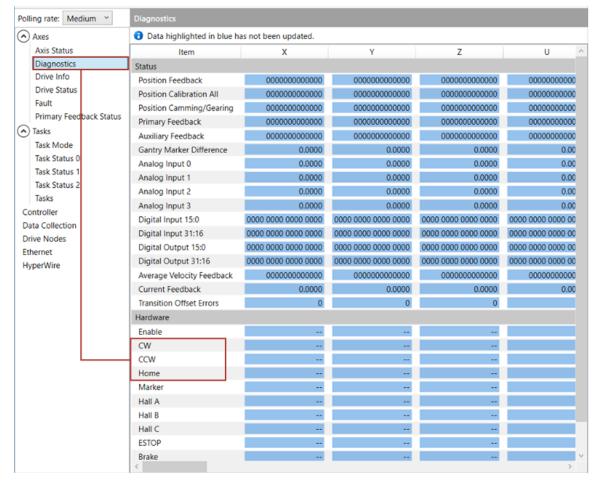

2.3.6. Brake Outputs

The drive has a dedicated brake control circuit. Configure the brake with the BrakeSetup [A3200: EnableBrakeControl] parameter for automatic control (typical). You can also use software commands to directly control the brake output.

Refer to Section 2.6. for more information on powering the brake circuit.

Table 2-24: Brake Output Pins on the Feedback Connector


Pin #	Description	In/Out/Bi
13	Brake Output -	Output
25	Brake Output +	Output

Table 2-25: Brake Control Specifications

Specification	Value
Maximum Voltage	24 VDC
Maximum Current	1 A

A varistor must be connected across the brake to minimize voltage transients.

Figure 2-32: Brake Connected to the 25-Pin Feedback Connector (Typical)

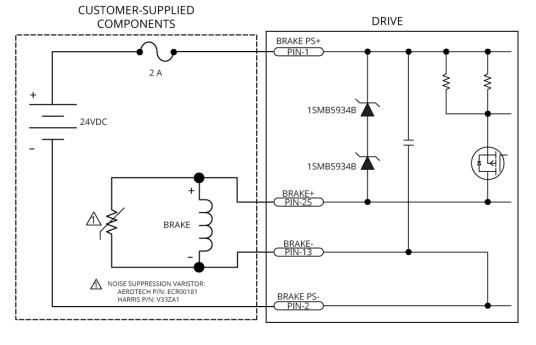

2.4. Safe Torque Off Input (STO)

The STO circuit is comprised of two identical channels, each of which must be energized in order for the drive to produce motion. Each STO input is opto-isolated and accepts 24 V levels directly without the need for external current limiting resistors.



IMPORTANT: The drive might be equipped with an STO bypass circuit board. The bypass circuit board defeats the STO safety circuit and allows the system to run at all times. To use the STO safety functionality, remove the circuit board and make connections as outlined in this section. Refer to Installation Overview on Page 16 for the location of the STO bypass plug.



IMPORTANT: The application circuit and its suitability for the desired safety level is the sole responsibility of the user of the drive.



WARNING: STO wires must be insulated to prevent short circuits between connector pins. The primary concern is a short circuit between STO 1 IN and STO 2 IN wire strands.

Table 2-26: STO Connector Pinout

Pin#	Signal	Description	In/Out/Bi	Connector
1	Power Supply +	Use only to defeat STO by connecting to STO 1 IN and STO 2 IN. Not for customer use.	Output	
2	STO 1 IN	STO Channel 1 Positive Input	Input	+V STO 1 IN
3	RETURN	STO Negative Input	Input	STO 1 IN RETURN
4	STO 2 IN	STO Channel 2 Positive Input	Input	STO 2 IN
5	Power Supply -	Use only to defeat STO by connecting to RETURN. Not for customer use.	Output	

Table 2-27: STO Mating Connector Ratings

Specification		Description
Туре		5-Pin Terminal Block
Part Numbers		Aerotech: ECK02393
		Phoenix: 1827622
Conductor Cross	One conductor, stranded with ferrule and plastic sleeve	1822 AWG (0.250.75 mm ²)
Section Section	Two conductors (same cross-section), stranded, twin ferrule with plastic sleeve	20 AWG (0.5 mm ²)
Tightening Torque		0.220.25 N⋅m
Conductor Insulation Strip Length		7 mm (0.25 in)
(1) Refer to the manufacturer website for additional information.		

Table 2-28: STO Electrical Specifications


Status	Value
STO off (motion allowed)	18-24 V, 7 ma
STO on (safe state entered, no motion)	0-6 V
Recommended Wire Gauge	22-26 AWG (0.5 - 0.14 mm ²)
STO System Power Supply	PELV
STO Wire Length (maximum)	50 m

Figure 2-33 shows one safety device connected to multiple drives in parallel.



WARNING: The drive does not check for short circuits on the external STO wiring. If this is not done by the external safety device, short circuits on the wiring must be excluded. Refer to EN ISO 13849-2. For Category 4 systems, the exclusion of short circuits is mandatory.

Figure 2-33: Typical STO Configuration

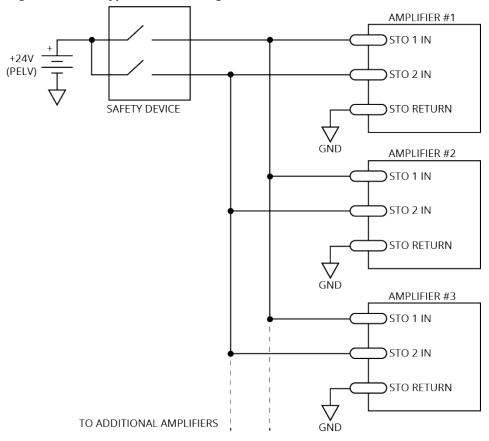

2.4.1. STO Standards

Table 2-29 describes and specifies the safety requirements at the system level for the Safe Torque Off (STO) feature of the drive. This assumes that diagnostic testing is performed according to Section 2.4.4. and Table 2-30.

Table 2-29: STO Standards

Standard	Maximum Achievable Safety
EN/IEC 61800-5- 2:2016	SIL 3
EN/IEC 61508-1:2010	SIL 3
EN/IEC 61508-2:2010	SIL 3
EN ISO 13849-1:2015	Category 4, PL e
EN/IEC 62061:2005 with Amendments	SIL 3

Table 2-30: STO Standards Data

Standard	Value	
	MTTF _D > 1000 years,	
EN ISO 13849-1:2015	DC _{AVG} 99%	
	Maximum PL e, Category 4	
	Lifetime = 20 years	
EN 100 400 40 4 00 45	No proof test required	
EN ISO 13849-1:2015	Interval for manual STO test:	
EN/IEC 61508	Once per year for SIL2/PL d/category 3	
	 Once per three months for SIL3/PL e/category 3 Once per day for SIL3/PL e/category 4 	
	SIL3	
EN/IEC 61508	PFH < 3 FIT	
	SFF > 99%	

2.4.2. STO Functional Description

The motor can only be activated when voltage is applied to both STO 1 and STO 2 inputs. The STO state will be entered if power is removed from either the STO 1 or the STO 2 inputs. When the STO state is entered, the motor cannot generate torque or force and is therefore considered safe. Both STO channels must be driven at the same time. If they are not driven at the same time, a diagnostic test failure will occur (refer to STO Diagnostics).

The STO function is implemented with two redundant channels in order to meet stated performance and SIL levels. STO 1 disconnects the high side power amplifier transistors and STO 2 disconnects the low side power amplifier transistors. Disconnecting either set of transistors effectively prevents the drive from being able to produce motion.

The drive software monitors each STO channel and will generate an Emergency Stop software fault when either channel signals the stop state. Each STO channel contains a fixed delay which allows the drive to perform a controlled stop before the power amplifier transistors are turned off.

A typical configuration requiring a controlled stop has the Emergency Stop Fault mask bit set in the FaultMask, FaultMaskDecel, and FaultMaskDisable parameters. This stops the axis using the rate specified by the AbortDecelRate parameter. The software will disable the axis as soon as the deceleration ramp is complete. This is typically configured to occur before the STO channel turns off the power amplifier transistors.

The software-controlled stop functionality must be excluded when considering overall system safety. This is because the software is not safety rated and cannot be included as part of the safety function.

The software-controlled stop function can ignore short diagnostic pulses on the STO 1+ and STO 2+ inputs. The parameter "STOPulseFilter" specifies the maximum pulse width that the software will ignore. The filter parameter does not affect the operation of STO hardware channels.

To resume normal operation, apply power to both STO 1 and STO 2 inputs and use the *Acknowledge All* button or the AcknowledgeAll() or FaultAcknowledge() function to clear the Emergency Stop software fault. The recommended use of the Emergency Stop Fault fault mask bits prevent the system from automatically restarting.

You can achieve longer delay times through the use of an external delay timer, such as the Omron G9SA-321 Safety Relay Unit. Place this device between the system ESTOP wiring and the drive's STO inputs. Connect the ESTOP signal directly to a digital input, in addition to the external timer, to allow the drive to begin a software-controlled stop as soon as the ESTOP signal becomes active. Use the EmergencyStopFaultInput [A3200: ESTOPFaultInput] parameter to configure a digital input as an ESTOP input.

The STO feature can only be used with AC or stepper motor types. It is not certified to prevent hazardous motion when using DC brush motor types.

Non-standard STO delay times are provided by special factory order. In this case, the non-standard STO delay time is indicated by a label placed on the slice amplifier's main connector (STO DELAY = xx sec).

Table 2-31: STO Signal Delay

	Value
STO Time Delay	450-550 msec

Table 2-32: Motor Function Relative to STO Input State

STO 1	STO 2	Motor Function	
Unpowered	Unpowered	No force/torque	
Unpowered (1)	Powered (1)	No force/torque	
Powered (1)	Unpowered ⁽¹⁾	No force/torque	
Powered Powered Normal Operation			
1. This is considered a Fault Condition since STO 1 and STO 2 do not match. Refer to Section 2.4.4.			

2.4.3. STO Startup Validation Testing

Verify the state of the STO 1 and STO 2 channels by manually activating the external STO hardware. Each STO channel must be tested separately in order to detect potential short circuits between the channels. The current state of the STO 1 and STO 2 inputs is shown in the Status Utility. A "—" indicates that the STO input is powered by a high voltage level (24 V). An "ON" indicates that the voltage source has been removed from the input (open circuit or 0 V), and that the STO channel is in the safe state.



DANGER: The STO circuit does not remove lethal voltage from the motor terminals. AC mains power must be removed before servicing.

2.4.4. STO Diagnostics

Activation of STO means removing power from the drive STO inputs. This is typically done by pressing the emergency stop switch. The drive initiates a diagnostic check every time the STO is activated after the Diagnostic Test Delay Time has elapsed. The diagnostic check verifies that each channel has entered the safe state. The drive is held in the safe state if it determines that one of the channels has not properly entered the safe state. An open circuit or short to 24 V in either STO channel will result in this condition (refer to Section 2.4.3.). The Status Utility screen can be used to verify the levels of the STO input signals while troubleshooting. The safe state is cleared when both STO channels are cycled with matching signal levels such that the diagnostic test completes successfully.

The drive is held in the safe state if it determines that one of the channels has not properly entered the safe state. In this case, the stoCrossCheckFault bit will be set and can be viewed in the **STO Status** status item. A **Position Error Fault** or **Emergency Stop Fault** will occur if motion is attempted while in this state. The drive will remain in the safe state until STO is reactivated with both channels in a safe state such that the diagnostics test completes successfully.


An open circuit or short to 24 V in either STO channel or a timing difference between the channels will result in a diagnostic test failure (refer to STO Startup Validation Testing). The Status Utility screen or **STO Status** status item can be used to verify the levels of the STO input signals while troubleshooting.

In order to pass internal testing, the STO circuit must be activated (power removed from both inputs) according to the interval specified in Table 2-30.

Table 2-33: STO Timing

Time	Description	Value
T1	STO Delay Time (STO input active to motor power off)	450-550 msec
T2	STO deactivated to motor power on (the software is typically configured so that the motor does not automatically re-energize).	< 1 msec
T3	Diagnostic Test Delay Time	550-610 msec



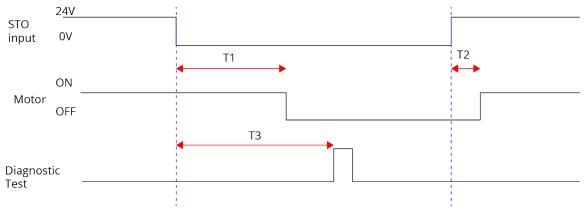

The software is typically configured to execute a controlled stop when the STO state is first detected. If power is reapplied to the STO inputs before the STO Delay Time, an STO hardware shutdown will not occur but a software stop may, depending on the width of the STO pulse. The controller will ignore STO active pulses shorter in length than the STOPulseFilter parameter setting.

2.5. Auxiliary I/O Connector

The Auxiliary I/O connector has 1 analog input, 6 digital inputs, 1 analog output, 4 digital outputs, a secondary line driver encoder input, and a secondary absolute encoder interface.

Table 2-34: Auxiliary I/O Connector Pinout

Tubic 2	-54. Auxiliary 1/0 Confidence Fillout		
Pin#	Description	In/Out/Bi	Connector
1	Auxiliary Sine +	Bidirectional	
	Absolute Encoder Data +	Bidirectional	
2	Auxiliary Sine -	Bidirectional	
	Absolute Encoder Data -	Bidirectional	
3	High-Speed Input 20 + / PSO External Sync. +	Input	
4	High-Speed Input 20 - / PSO External Sync	Input	
5	High-Speed Input 21 +	Input	
6	High-Speed Input 21 -	Input	
7	Digital Output 0	Output	
8	Digital Output 1	Output	
9	Digital Output 2	Output	
10	Auxiliary Cosine +	Bidirectional	
10	Absolute Encoder Clock +	Output	(18 O)
11	Auxiliary Cosine-	Bidirectional	
''	Absolute Encoder Clock -	Output	
12	+5 V (500 mA max)	Output	
13	Analog Input 0+ (Differential)	Input	
14	Analog Input 0- (Differential)	Input	
15	Digital Output Common	Output	
16	Digital Output 3	Output	
17	Digital Input 0 / CCW EOT Input (1)	Input	
18	Digital Input 1 / CW EOT Input (1)	Input	
19	Auxiliary Marker - / PSO ⁽²⁾ Differential Output - / PSO TTL Output	Bidirectional	
20	Auxiliary Marker + / PSO ⁽²⁾ Differential Output +	Bidirectional	
21	Common	Output	
22	Analog Output 0	Output	
23	Analog Common	Output	
24	Digital Input Common	Output	
25	Digital Input 2 / Home Input (1)	Input	
26	Digital Input 3	Input	
(1) Softw	rare configured option	1	
(a) = =			

(2) For PSO, refer to Section 2.5.2.

Table 2-35: Auxiliary I/O Mating Connector Ratings

Specification	26-Pin Solder Cup	Backshell
Aerotech Part Number	ECK01259	ECK01022
Manufacturer Part Number (1)	Kycon K86-AA-26P	Amphenol 17E-1725-2
Maximum Wire Size 22 AWG (0.25 mm²) N/A		
(1) Refer to the manufacturer website for additional information.		

2.5.1. Auxiliary Encoder Interface

The Auxiliary Encoder connector gives you a second encoder channel. This channel is typically used for dual loop applications.

Use the AuxiliaryFeedbackType [A3200: PositionFeedbackType or VelocityFeedbackType] parameter to configure the drive to accept an encoder signal type.

Square Wave encoder signals: Section 2.5.1.1.

Absolute encoder signals: Section 2.5.1.2.

You can configure the Auxiliary Encoder interface as an output that will transmit encoder signals for external use. Use the DriveEncoderOutputConfigureInput() function [A3200: EncoderDivider parameter] to configure the Sine \pm and Cosine \pm connector pins as RS-422 outputs. You can only echo incremental square wave primary encoder inputs. You cannot use the absolute encoder interface when you echo incremental signals.

Table 2-36: Auxiliary Encoder Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
1	Auxiliary Sine +	Bidirectional
'	Absolute Encoder Data +	Bidirectional
2	Auxiliary Sine -	Bidirectional
2	Absolute Encoder Data -	Bidirectional
10	Auxiliary Cosine +	Bidirectional
10	Absolute Encoder Clock +	Output
11	Auxiliary Cosine-	Bidirectional
''	Absolute Encoder Clock -	Output
12	+5 V (500 mA max)	Output
19	Auxiliary Marker - / PSO ⁽²⁾ Differential Output - / PSO TTL Output	Bidirectional
20	Auxiliary Marker + / PSO ⁽²⁾ Differential Output +	Bidirectional
21	Common	Output
(2) For PS	O, refer to Section 2.5.2.	


2.5.1.1. Square Wave Encoder (Auxiliary)

The drive accepts RS-422 square wave encoder signals. The drive will generate a feedback fault if it detects an invalid signal state caused by an open or shorted signal connection. Use twisted-pair wiring for the highest performance and noise immunity.

Table 2-37: Square Wave Encoder Specifications

Specification	Value
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

Figure 2-35: Square Wave Encoder Interface (Aux I/O Connector)

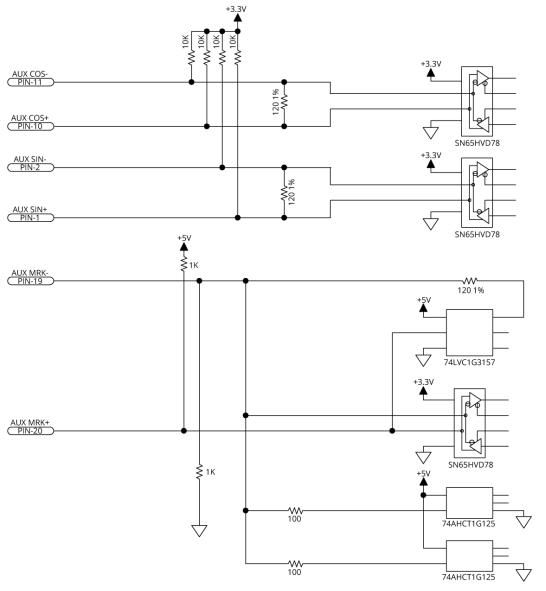

2.5.1.2. Absolute Encoder (Auxiliary)

The drive retrieves absolute position data along with encoder fault information through a serial data stream from the absolute encoder. Use twisted-pair wiring for the highest performance and noise immunity. You cannot use an absolute encoder with incremental signals on the Auxiliary I/O Connector.


Refer to Figure 2-36 for the serial data stream interface.

Refer to the Help file for information on how to set up your EnDat, BiSS, or SSI absolute encoder parameters.

Table 2-38: Absolute Encoder Specifications

Specification	Value
Sampling Frequency	20 kHz
Maximum Reading Speed	Refer to your encoder data sheet.

Figure 2-36: Absolute Encoder Schematic (Auxiliary I/O Connector)

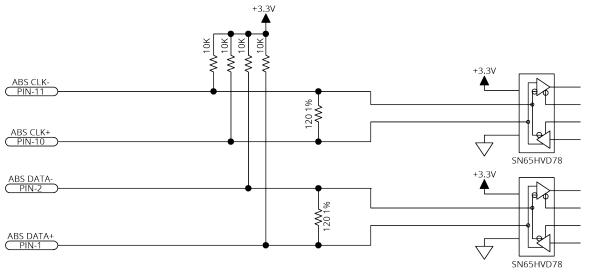

2.5.2. Position Synchronized Output (PSO)

The PSO signal is available on the dual-function AUX Marker/PSO signal lines. Use the PSO pulse external sync functions [A3200: PSOOUTPUT PULSE EXTSYNC command] to configure the auxiliary marker as an output. Refer to the Help file for more information.

Use the PsoOutputConfigureOutput() function [A3200: PSOOUTPUT CONTROL command] to transmit the PSO output signal on the Marker ± pins differentially. Or, use the PsoOutputConfigureOutput() function [A3200: PSOOUTPUT CONTROL command] to configure the Marker - pin as a 5V TTL PSO output.

You cannot use a sine wave encoder with the -MX1 multiplier option as an input to the PSO. The -MX1 option does not generate emulated quadrature signals.

When configured for differential use with pin 19 as PSO Differential Output - and pin 20 as PSO Differential Output +, the PSO output is active low. Figure 2-37 shows how the output pins are biased so that the output is in the OFF state when it is not actively driven. If you want an active high output, you can change the pins so that pin 19 is the PSO Differential Output + and pin 20 is the PSO Differential Output -.

The differential signal format is recommended when using long cable lengths in noisy environments or when high frequency pulse transmission is required. It is best to locate the line receiver close to the receiving electronics. A 5 V TTL signal is used to drive an opto coupler or general purpose TTL input. This signal is active high and is driven to 5 V when a PSO fire event occurs. When the drive is reset or after initial power up, the PSO pins (refer to Table 2-40), are not actively driven and the fail safe state is defined by pull-up and pull-down resistors as shown in Figure 2-37.

The -EB1 I/O option board has additional PSO signal formats. Refer to Section 3.5. for more information.


Table 2-39: PSO Specifications

Specification		Value
Output	TTL	5 V, 16 mA (max)
Maximum BSO Output (Fire) Frequency	TTL	12.5 MHz
Maximum PSO Output (Fire) Frequency	RS-422	12.5 MHz
Output Latency	TTL	25 ns
[Fire event to output change]	RS-422	25 ns

Table 2-40: PSO Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
19	Auxiliary Marker - / PSO Differential Output - / PSO TTL Output	Bidirectional
20	Auxiliary Marker + / PSO Differential Output +	Bidirectional
21	Common	Output

Figure 2-37: PSO Interface

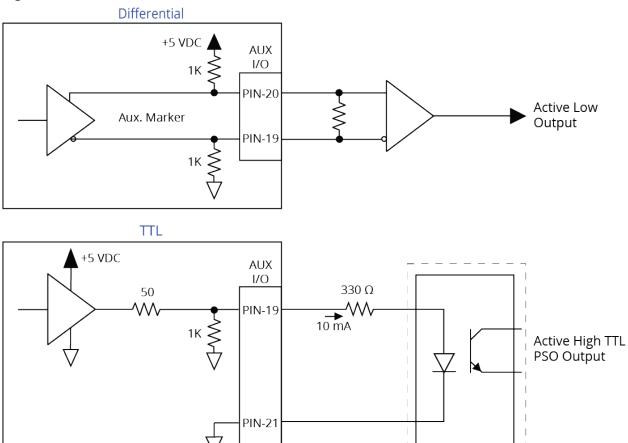

2.5.3. Digital Outputs

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in the same configuration. Refer to Figure 2-39 and Figure 2-40.

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to Figure 2-39. To see an example of a current sinking output that has diode suppression, refer to Figure 2-40.

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.

The digital outputs have overload protection. They will resume normal operation when the overload is removed.

Table 2-41: Digital Output Specifications

Digital Output Specifications	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	250 mA/output
Output Saturation Voltage	0.9 V at maximum current
Output Resistance	3.7 Ω
Rise / Fall Time	250 μs (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Table 2-42: Digital Output Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
7	Digital Output 0	Output
8	Digital Output 1	Output
9	Digital Output 2	Output
15	Digital Output Common	Output
16	Digital Output 3	Output


COMMON PIN-15 DIGITAL OUT 0
PIN-7 -**W**-3.3 Ω CPC1019N DIGITAL OUT 1
PIN-8 -**W**-3.3 Ω CPC1019N DIGITAL OUT 2 -**W**-3.3 Ω CPC1019N DIGITAL OUT 3
PIN-16 -**W**-3.3 Ω

Figure 2-38: Digital Output Schematic (Aux I/O Connector)

76


CPC1019N

Figure 2-39: Digital Outputs Connected in Current Sourcing Mode

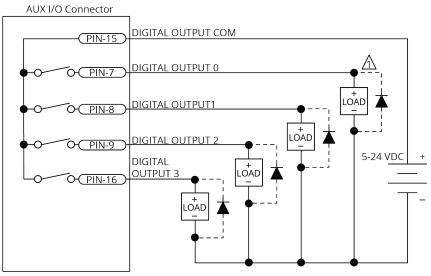

⚠ DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

Figure 2-40: Digital Outputs Connected in Current Sinking Mode

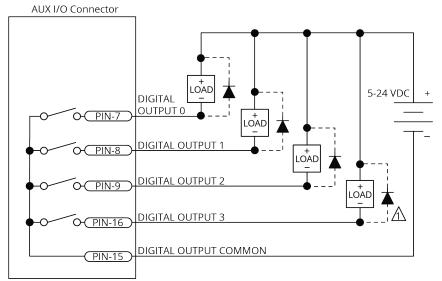

 \bigwedge diode required on each output that drives an inductive device (coil), such as a relay.

2.5.4. Digital Inputs

You can connect the digital inputs to current sourcing or current sinking devices but you must connect all four inputs in the same configuration. Refer to Figure 2-42 and Figure 2-43. The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.

Table 2-43: Digital Input Specifications

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	6 mA	10 µs	43 µs

Table 2-44: Digital Input Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi	
17	Digital Input 0 / CCW EOT Input (1)	Input	
18	Digital Input 1 / CW EOT Input (1)	Input	
24	Digital Input Common	Output	
25	Digital Input 2 / Home Input (1)	Input	
26	Digital Input 3	Input	
(1) Softwa	(1) Software configured option		

Figure 2-41: Digital Inputs Schematic (Aux I/O Connector)

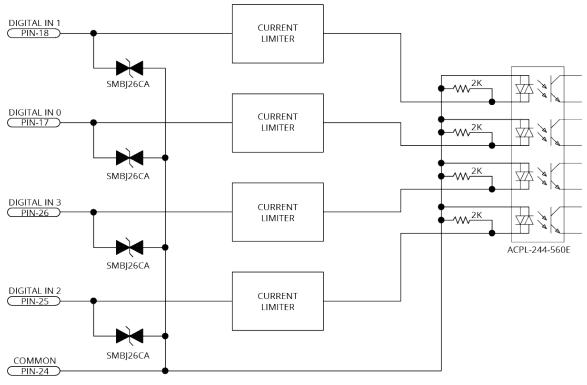


Figure 2-42: Digital Inputs Connected to Current Sourcing Devices


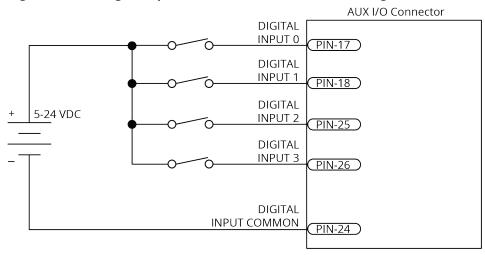


Figure 2-43: Digital Inputs Connected to Current Sinking Devices

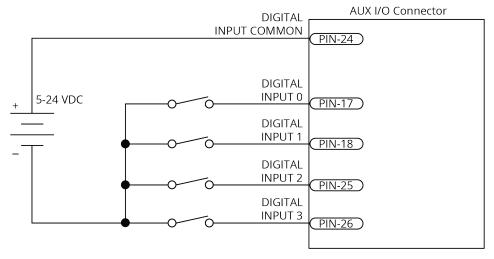

2.5.5. High-Speed Inputs

High-speed inputs 20 and 21 can be used as general purpose inputs or as the trigger signal for high speed data collection. Refer to the DriveDataCaptureConfigureTrigger() function [A3200: DATAACQ TRIGGER command] topic in the Help file for more information.

You can use the external PSO synchronization functions [A3200: PSOOUTPUT PULSE EXTSYNC command] to synchronize waveform generation with an external synchronization signal. When you activate this feature, the PSO Waveform module will not generate the configured waveform when an output event is received until the rising edge of the synchronization signal occurs.


Table 2-45: High-Speed Input Specifications

abio 2 io: ingli opoca inpat opocinications		
Specification	Value	
Input Voltage	5V - 24 V input voltages	
Input Current	10 mA	
Input Device	HCPL-0630	
Delay	50 nsec	

Table 2-46: High-Speed Input Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
3	High-Speed Input 20 + / PSO External Sync. +	Input
4	High-Speed Input 20 - / PSO External Sync	Input
5	High-Speed Input 21 +	Input
6	High-Speed Input 21 -	Input

Figure 2-44: High-Speed Inputs

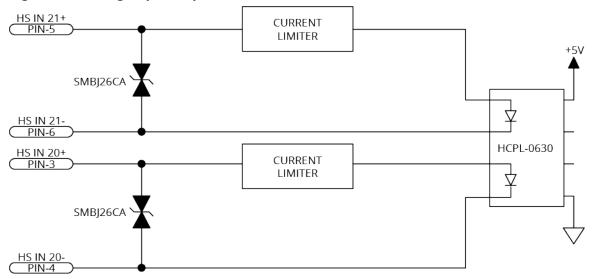

2.5.6. Analog Output 0

The analog output can be set from within a program or it can be configured to echo the state of select servo loop nodes.

The analog output is set to zero when you power on the system or reset the drive.


Table 2-47: Analog Output Specifications

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits

Table 2-48: Analog Output Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
22	Analog Output 0	Output
23	Analog Common	Output

Figure 2-45: Analog Output 0 Schematic

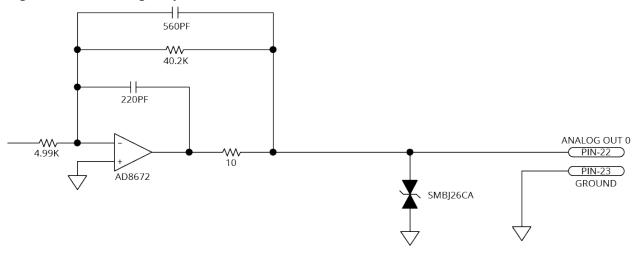

2.5.7. Analog Input 0 (Differential)

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to Figure 2-46.


Table 2-49: Analog Input Specifications

Specification	Value
(AI+) - (AI-)	+10 V to -10 V ⁽¹⁾
Resolution (bits)	16 bits
Input Impedance	1 ΜΩ
1. Signals outside of this range may damage the input	

Table 2-50: Analog Input Pins on the Auxiliary I/O Connector

Pin#	Pin# Description	
13	Analog Input 0+ (Differential)	Input
14	14 Analog Input 0- (Differential)	
23	Analog Common	Output

Figure 2-46: Analog Input 0 Schematic

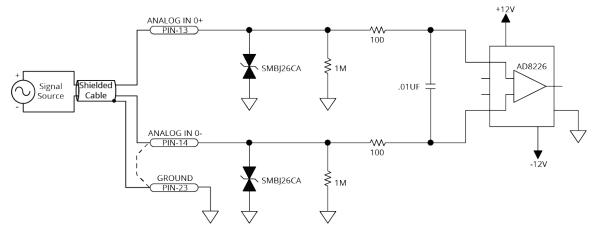

2.6. Brake Power Supply Connector

This port is the power supply connection to the on-board brake control circuit. Refer to Section 2.3.6. for more information about the brake output interface.

Table 2-51: Brake Power Supply Connector Pinout

Pin#	Description	In/Out/Bi	Connector
1	Brake Power Supply (+)	Input	+
2	Brake Power Supply (-)	Input	

Table 2-52: Brake Power Supply Mating Connector Ratings

Specification		Description		
Туре		2-Pin Terminal Block		
Part Numbers		Aerotech: ECK02391		
		Phoenix: 1827635		
Conductor Cross	One conductor, stranded with ferrule and plastic sleeve	1822 AWG (0.250.75 mm ²)		
Section	Two conductors (same cross-section), stranded, twin ferrule with plastic sleeve	20 AWG (0.5 mm ²)		
Tightening Torque		0.220.25 N⋅m		
Conductor Insulation Strip Length		7 mm (0.25 in)		
(1) Refer to the manufac				

2.7. HyperWire Interface

The HyperWire bus is the high-speed communications connection from the controller. It operates at 2 gigabits per second. The controller sends all command and configuration information through the HyperWire bus. This device consumes one of the available axes of control on the HyperWire communication network. Refer to your Automation1-iSMC license for the number of available HyperWire axes.

HyperWire cables can be safely connected to or disconnected from a HyperWire port while the PC and/or drive is powered on. However, any changes to the HyperWire network topology will disrupt communication and you must reset the controller to re-establish communication.



WARNING: Do not connect or disconnect HyperWire cables while you are loading firmware or damage to the drives may occur.

Table 2-53: HyperWire Card Part Number

Part Number	Description
HYPERWIRE-PCIE	HyperWire adapter, PCIe x4 interface

Table 2-54: HyperWire Cable Part Numbers

Part Number	Description
HYPERWIRE-AO10-5	HyperWire cable, active optical, 0.5 m
HYPERWIRE-AO10-10	HyperWire cable, active optical, 1.0 m
HYPERWIRE-AO10-30	HyperWire cable, active optical, 3.0 m
HYPERWIRE-AO10-50	HyperWire cable, active optical, 5.0 m
HYPERWIRE-AO10-200	HyperWire cable, active optical, 20.0 m

2.8. External Shunt Option [-SX1]

The -SX1 option provides a connection for a user-provided shunt resistor to dissipate excess energy and keep the internal drive voltage within safe levels. The drive switches this resistor "ON" when the internal bus voltage reaches approximately 380 VDC. This option is generally required for systems that have a large amount of stored mechanical energy that must be dissipated during deceleration.

DANGER: Shock and Fire Hazard

Electrical wiring must be designed and installed in accordance with local electrical safety regulations to prevent the risk of fire and electrical shock.



The shunt resistor dissipates a high quantity of power. To prevent the danger of electric shock or fire, you must obey the precautions that follow:



- Correctly size, mount, and protect the external shunt resistor.
- Do not touch the shunt resistor terminals. There are lethal voltages on the terminals.
- Do not touch the surface of the drive or the external shunt resistor. The temperature can exceed 70°C.
- Restrict access to the shunt resistor while it is connected to a power source.

Table 2-55: -SX1 Component Information

Component	Description	Aerotech P/N	
Recommended Shunt Resistor	50 Ω (min), 300 W	ECD01030	
Recommended Shunt Resistor	Vishay/Dale: RBEF030050R00KFBVT	ECR01039	
	Screw Torque Value: 0.6 - 0.8 N·m		
1-Pin Mating Connector [QTY. 2]	Wire Size: 0.2 - 6 mm ² [24-10 AWG]	ECK02452	
	Phoenix: 0708250		
F101 Fuse on the Control Board	8 A S.B.	EIF01022	
Recommended Wire Size	16 AWG (1.3 mm ²) High Temperature		

Equation 1:

Calculate the kinetic energy of the system. Any energy that is not lost to the system could be regenerated to the DC bus.

```
\begin{split} E_M &= \text{[1/2]} [J_M + J_L] \boldsymbol{\omega}^2_M & \text{; rotary motors} \\ E_M &= \text{[1/2]} [M_M + M_L] v^2_M & \text{; linear motors} \\ \end{split} \\ &\text{Where:} \\ J_M &= \text{rotor inertia } (kg \cdot m^2) \\ J_L &= \text{load inertia } (kg \cdot m^2) \\ \boldsymbol{\omega}_M &= \text{motor speed before deceleration } (rad/s) \\ M_M &= \text{forcer mass } (kg) \\ M_L &= \text{load mass } (kg) \\ v_M &= \text{velocity } (m/s) \end{split}
```

Equation 2:

You will need a shunt resistor if the regenerated energy is greater than the Maximum Additional Storage Energy that the internal bus capacitor can store (Table 2-56).

```
\begin{split} & E_{\text{Ca}} = \text{ (1/2)} \cdot \text{ C} \cdot \text{ (V}^2_{\text{M}} - \text{ V}^2_{\text{NOM}}) \\ & \text{Where:} \\ & \text{C} & = \text{bus capacitor (F) [1,200 \ \mu\text{F}]} \\ & \text{V}_{\text{M}} & = \text{turn on voltage for shunt circuit (V) [380 \ \text{V}]} \\ & \text{V}_{\text{NOM}} & = \text{nominal bus voltage (V) [160 \ \text{V or } 320 \ \text{V, Typical}]} \end{split}
```

Table 2-56: Maximum Additional Storage Energy for a Standard iXC4/XC4

Bus Voltage	Maximum Additional Energy
160 V	71.3 J
320 V	25.2 J

If a shunt resistor is required, calculate the value of resistance necessary to dissipate the energy.

Equations 3, 4, and 5:

Calculate the parameters of the shunt resistor.

Equation 3:

```
P_{PEAK}=\ (E_M\ -\ E_{Ca})\ /\ t_D Where: P_{PEAK}=\ peak\ power\ the\ regeneration\ circuit\ must\ accommodate\ (W) t_D=\ deceleration\ time\ (s)
```

Equation 4:

```
P_{AV} = (E_M - E_{Ca}) / t_{CYCLE} Where: P_{AV} = \text{average power dissipated on shunt resistor (W)} t_{CYCLE} = \text{time between deceleration events (s)}
```

Equation 5:

```
R=~(2V_M~-~V_{HYS})^{\,2}~/~4P_{PEAK} Where: V_{HYS}~=~hysteresis~voltage~of~regeneration~circuit~(V)~[10~V, \\ Typical]
```

Additional useful equations:

```
1 lb \cdot ft = 1.356 \text{ N} \cdot m
1 rad/s = 9.55 \text{ rpm}
```

2.9. Sync Port

The Sync port is a bi-directional high speed proprietary interface that lets you transmit encoder signals between drives. The drive contains two Sync ports, labeled A and B. To avoid signal contention, all Sync ports default to the input state during reset and immediately after power is applied to the drive.

This is typically used for multi-axis PSO applications where one or two drives send their encoder signals to a main drive that has the PSO logic and PSO output signal.

Table 2-57: Sync-Related Functions

Function	Description
DriveEncoderOutputConfigureDivider(),	
DriveEncoderOutputConfigureInput(),	
DriveEncoderOutputOn(),	Configure each Sync port as an input or an output
DriveEncoderOutputOff()	
[A3200: ENCODER OUT command]	
PsoDistanceConfigureInputs()	
[A3200: PSOTRACK INPUT command]	Let the PSO track the SYNC A or SYNC B port.
PsoWindowConfigureInput()	Let the F30 track the 3 fNC A of 3 fNC B port.
[A3200: PSOWINDOW INPUT command]	

The Sync port uses low-voltage differential signaling (LVDS) and standard USB 3.0 type A (cross over) cables.

Table 2-58: Sync Port Cables

Part Number	Desciption
CBL-SYNC-3	Length 3 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-5	Length 5 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-7	Length 7 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-10	Length 10 dm; Connectors: USB Type A to USB Type A

2.10. Industrial Ethernet (iXC4 Only)

The controller is equipped with 100BASE-TX Industrial Ethernet ports.



IMPORTANT: Industrial Ethernet is only available on the iXC4.

- For the location of the ports, refer to Figure 1-1.
- For cable part numbers, refer to Table 4-1.
- For more information, refer to the Help system.

2.11. System Interconnection

Figure 2-47: Drive-Based System Wiring Drawing (Best Practice)


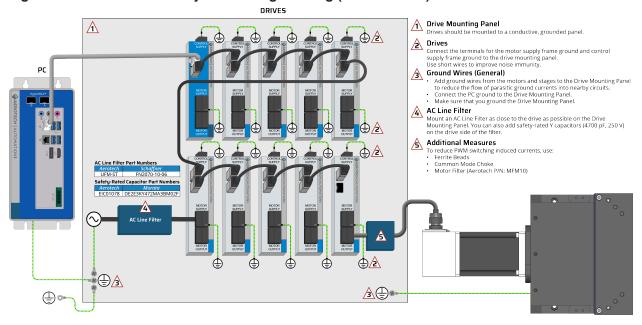


Figure 2-48: PC-Based System Wiring Drawing (Best Practice)

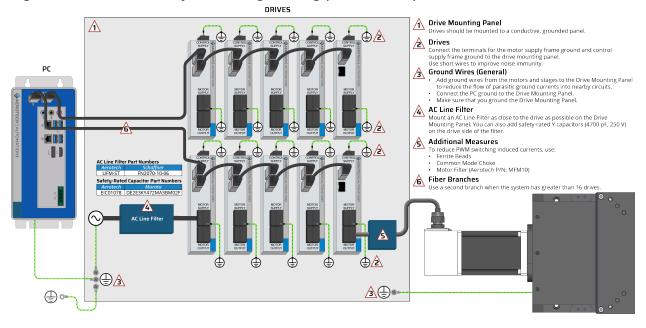

△ (A6)
MFM10-1
SOLONIO SYSTEM COMPUTER XC4/ XC4e (A2) SN xxxxxxx12 **⊕**<u>A</u>⊕ >>>. XC4/ XC4e (A3) SN1xxxxxxxx3 $\oplus \triangle \oplus$ (AB) MFM10-1 & IDEL GC UNIO 🚺 ! ATTENTION! 👍

Figure 2-49: Recommended System Connections for a Drive-Based Controller

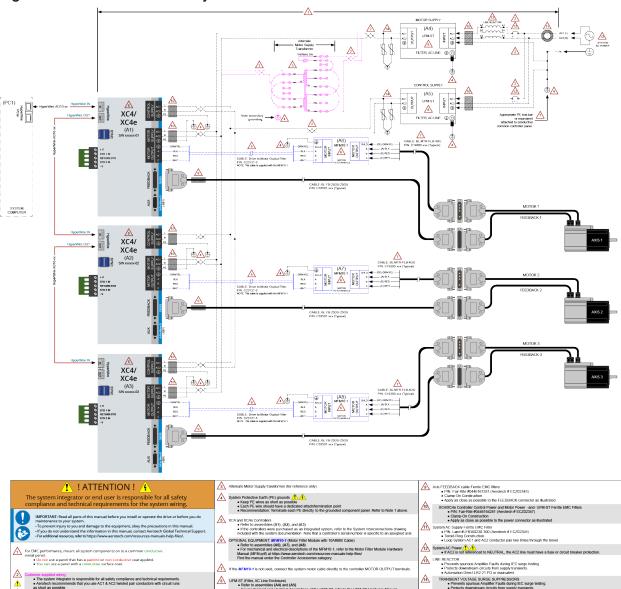


Figure 2-50: Recommended System Connections for a PC-Based Controller

2.12. PC Configuration and Operation Information


For more information about hardware requirements, PC configuration, programming, system operation, and utilities, refer to the Help file.

This page intentionally left blank.

Chapter 3: -EB1 Option Expansion Board

The -EB1 I/O option board has 16 digital inputs, 16 digital outputs, 3 analog inputs, 3 analog outputs, and PSO outputs.

Figure 3-1: -EB1 I/O Option Board Connectors (iXC4 shown)

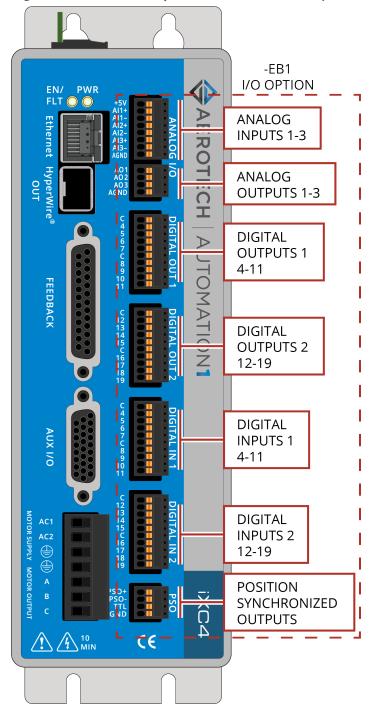

3.1. Digital Outputs [-EB1]

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in a port in the same configuration. Refer to Figure 3-3 and Figure 3-4.

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to Figure 3-3. To see an example of a current sinking output that has diode suppression, refer to Figure 3-4.

The digital outputs have overload protection. They will resume normal operation when the overload is removed.

Table 3-1: Digital Output Specifications [-EB1]

Digital Output Specifications	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	250 mA/output
Output Saturation Voltage	0.9 V at maximum current
Output Resistance	3.7 Ω
Rise / Fall Time	250 μs (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Table 3-2: Digital Output 1 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Output Common for Outputs 4-7	Output	
2	Output 4 (Optically-Isolated)	Output	C
3	Output 5 (Optically-Isolated)	Output	
4	Output 6 (Optically-Isolated)	Output	6
5	Output 7 (Optically-Isolated)	Output	7
6	Output Common for Outputs 8-11	Output	C I •
7	Output 8 (Optically-Isolated)	Output	8
8	Output 9 (Optically-Isolated)	Output	10
9	Output 10 (Optically-Isolated)	Output	11
10	Output 11 (Optically-Isolated)	Output	

Table 3-3: Digital Output 2 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Output Common for Outputs 12-15	Output	
2	Output 12 (Optically-Isolated)	Output	C I P
3	Output 13 (Optically-Isolated)	Output	12
4	Output 14 (Optically-Isolated)	Output	13
5	Output 15 (Optically-Isolated)	Output	15
6	Output Common for Outputs 16-19	Output	C II •
7	Output 16 (Optically-Isolated)	Output	16
8	Output 17 (Optically-Isolated)	Output	17
9	Output 18 (Optically-Isolated)	Output	19
10	Output 19 (Optically-Isolated)	Output	

Table 3-4: Digital Output 1 and 2 Mating Connector Ratings [-EB1]

Specification		Description	
Туре		10-Pin Terminal Block	
Part Numbers		Aerotech: ECK02395	
		Phoenix: 1700841	
Conductor	Solid or stranded	2026 AWG (0.140.5 mm ²)	
Cross Section	Stranded, with ferrule, without plastic sleeve	2024 AWG (0.250.5 mm ²)	
Conductor Insulation Strip Length		8 mm (5/16 in)	
(1) Refer to the manufacturer website for additional information.			

Figure 3-2: Digital Outputs Schematic [-EB1]



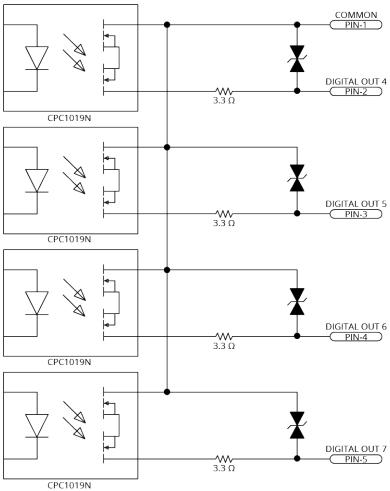


Figure 3-3: Digital Outputs Connected in Current Sourcing Mode [-EB1]

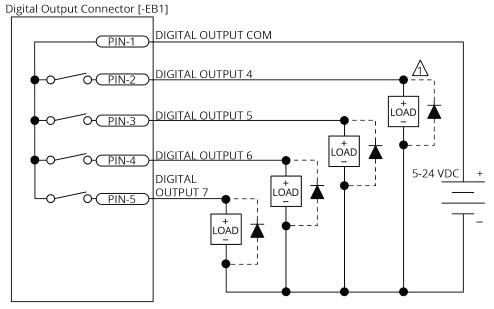

DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

Figure 3-4: Digital Outputs Connected in Current Sinking Mode [-EB1]

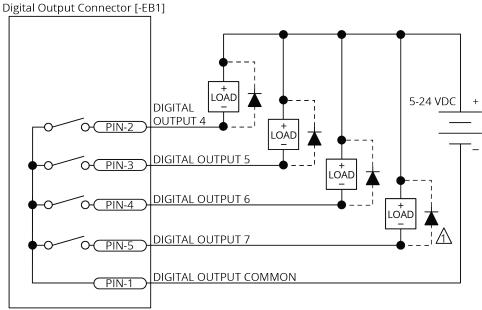

DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

3.2. Digital Inputs [-EB1]

Input bits are arranged in groups of 4 and each group shares a common pin. This lets a group be connected to current sourcing or current sinking devices, based on the connection of the common pin in that group.

To be able to connect an input group to current sourcing devices, connect the input group's common pin to the power supply return (-). Refer to Figure 3-6.

To be able to connect an input group to current sinking devices, connect the input group's common pin to the power supply source (+). Refer to Figure 3-7.

The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.

Table 3-5: Digital Input Specifications [-EB1]

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	6 mA	10 µs	43 µs

Table 3-6: Digital Input 1 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Input Common for Inputs 4-7	Output	
2	Input 4 (Optically-Isolated)	Input	C
3	Input 5 (Optically-Isolated)	Input	5
4	Input 6 (Optically-Isolated)	Input	6
5	Input 7 (Optically-Isolated)	Input	7
6	Input Common for Inputs 8-11	Output	
7	Input 8 (Optically-Isolated)	Input	8
8	Input 9 (Optically-Isolated)	Input	10
9	Input 10 (Optically-Isolated)	Input	11
10	Input 11 (Optically-Isolated)	Input	


Table 3-7: Digital Input 2 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Input Common for Inputs 12-15	Output	
2	Input 12 (Optically-Isolated)	Input	C I •
3	Input 13 (Optically-Isolated)	Input	12
4	Input 14 (Optically-Isolated)	Input	13 1
5	Input 15 (Optically-Isolated)	Input	15
6	Input Common for Inputs 16-19	Output	C II •
7	Input 16 (Optically-Isolated)	Input	16
8	Input 17 (Optically-Isolated)	Input	17 18 1
9	Input 18 (Optically-Isolated)	Input	19
10	Input 19 (Optically-Isolated)	Input	

Table 3-8: Digital Input 1 and 2 Mating Connector Ratings [-EB1]

Specification		Description
Туре		10-Pin Terminal Block
Part Numbers		Aerotech: ECK02395
		Phoenix: 1700841
O a ra also at a ra	Solid or stranded	2026 AWG (0.140.5 mm ²)
Conductor Cross Section	Stranded, with ferrule, without plastic sleeve	2024 AWG (0.250.5 mm ²)
Conductor Insulation Strip Length 8 mm (5/16 in)		8 mm (5/16 in)
(1) Refer to the manufacturer website for additional information.		

Figure 3-5: Digital Inputs Schematic [-EB1]

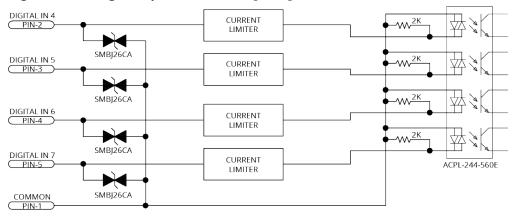



IMPORTANT: Each bank of four inputs must be connected in an all sourcing or all sinking configuration.

Figure 3-6: Digital Inputs Connected to Current Sourcing (PNP) Devices [-EB1]


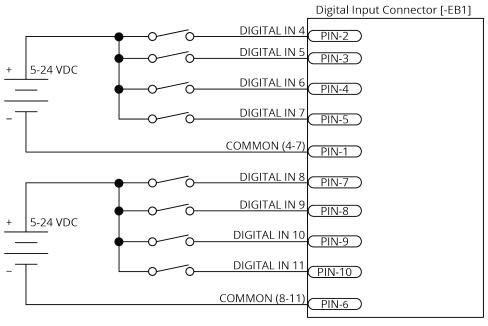


Figure 3-7: Digital Inputs Connected to Current Sinking (NPN) Devices [-EB1]

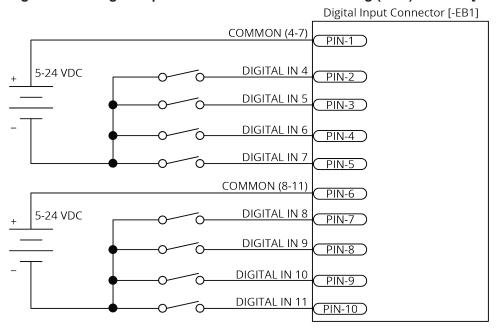

3.3. Analog Outputs [-EB1]

The analog outputs can be set from within a program or they can be configured to echo the state of select servo loop nodes.

The analog outputs are set to zero when you power on the system or reset the drive.

Table 3-9: Analog Output Specifications [-EB1]

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits


Table 3-10: Analog Output Connector Pinout [-EB1]

Pin #	Description	In/Out/Bi	Connector
1	Analog Output 1	Output	4
2	Analog Output 2	Output	2
3	Analog Output 3	Output	3
4	Ground	N/A	4

Table 3-11: Analog Output Mating Connector Ratings [-EB1]

Specification		Description	
Туре		4-Pin Terminal Block	
Part Numbers		Aerotech: ECK02399	
		Phoenix: 1768004	
Conductor Cross	Solid or stranded	2026 AWG (0.140.5 mm ²)	
Section	Stranded, with ferrule, without plastic sleeve	2024 AWG (0.250.5 mm ²)	
Conductor Insulation Strip Length 8 mm (5/16 in)		8 mm (5/16 in)	
(1) Refer to the manufacturer website for additional information.			

Figure 3-8: Analog Output Typical Connection [-EB1]

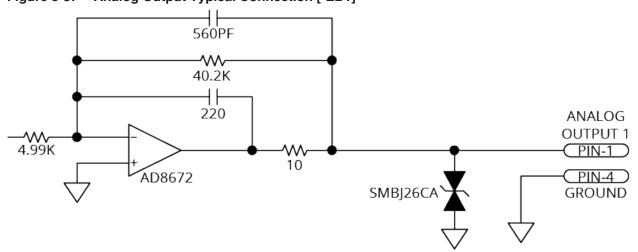

3.4. Analog Inputs [-EB1]

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to Figure 3-9.

Table 3-12: Differential Analog Input Specifications [-EB1]

Specification	Value	
(Al+) - (Al-)	+10 V to -10 V ⁽¹⁾	
Resolution (bits)	16 bits	
Input Impedance $1 \text{ M}\Omega$		
Signals outside of this range may damage the input		


Table 3-13: Analog Input Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	+5V (250 mA max)	Output	
2	Analog Input 1+	Input	
3	Analog Input 1-	Input	3
4	Analog Input 2+	Input	4
5	Analog Input 2-	Input	5
6	Analog Input 3+	Input	6
7	Analog Input 3-	Input	8
8	Ground	N/A	

Table 3-14: Analog Input Mating Connector Ratings [-EB1]

Specification		Description	
Туре		8-Pin Terminal Block	
Part Numbers		Aerotech: ECK02397	
		Phoenix: 1908101	
Conductor Cross	Solid or stranded	2026 AWG (0.140.5 mm ²)	
Section	Stranded, with ferrule, without plastic sleeve	2024 AWG (0.250.5 mm ²)	
Conductor Insulation Strip Length		8 mm (5/16 in)	
(1) Refer to the manufac	cturer website for additional information.		

Figure 3-9: Analog Input Typical Connection [-EB1]

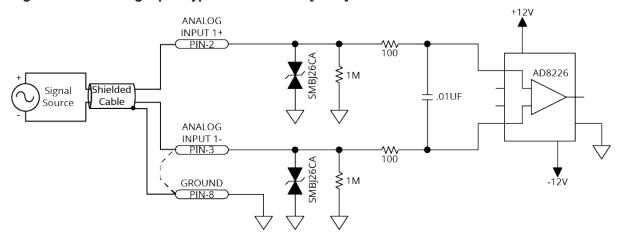

3.5. PSO Interface [-EB1]

The Position Synchronized Output (PSO) signal is available on the -EB1 option board in two signal formats: TTL and Isolated.

The PSO signal is also available on the AUX I/O connector. Refer to Section 2.5.2.

You cannot use a sine wave encoder with the -MX1 multiplier option as an input to the PSO. The -MX1 option does not generate emulated quadrature signals.

Table 3-15: PSO Specifications [-EB1]

Specification		Value
Output	TTL	5 V, 50 mA (max)
Output	Isolated	5-24 V, 250 mA
Maximum PSO Output (Fire) Frequency	TTL	12.5 MHz
Maximum F30 Output (Fire) Frequency	Isolated	5 MHz
Output Latency	TTL	15 ns
[Fire event to output change]	Isolated	160 ns

Table 3-16: PSO Interface Connector Pinout [-EB1]

Pin #	Description	In/Out/Bi	Connector
1	PSO Output+	Output	
2	PSO Output-	Output	2
3	PSO Output (TTL)	Output	3
4	Ground	N/A	4

Table 3-17: PSO Interface Mating Connector Ratings [-EB1]

Specification		Description	
Туре		4-Pin Terminal Block	
Part Numbers		Aerotech: ECK02399	
		Phoenix: 1768004	
Conductor Cross Section	Solid or stranded	2026 AWG (0.140.5 mm ²)	
	Stranded, with ferrule, without plastic sleeve	2024 AWG (0.250.5 mm ²)	
Conductor Insulation Strip Length		8 mm (5/16 in)	
(1) Refer to the manufacturer website for additional information.			


Isolated Signals

This output signal is a fully-isolated 5-24V compatible output capable of sourcing or sinking current. This output is normally open and only conducts current when a PSO fire event occurs.

The PSO Isolated Outputs are overload protected and will turn off if the maximum output current is exceeded.

Figure 3-10: PSO Output Sources Current


Figure 3-11: PSO Output Sinks Current

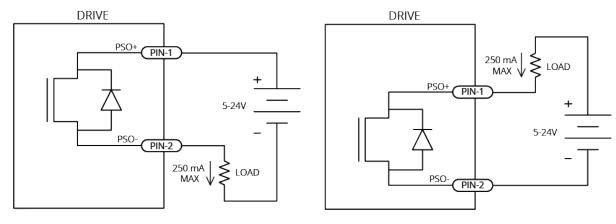

TTL Signals

This output signal is a 5V TTL signal which is used to drive an opto coupler or general purpose TTL input. This signal is active high and is driven to 5V when a PSO fire event occurs.

Figure 3-12: PSO TTL Outputs Schematic

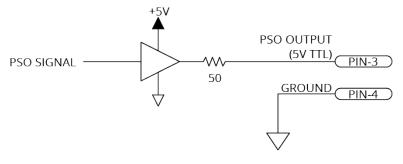

Chapter 4: Cables and Accessories

Table 4-1: Standard Interconnection Cables

Cable Part #	Description	
Joystick	Refer to Section 4.1.	
HyperWire	Refer to Section 2.7.	
ECZ01231	BBA32 Interconnect Cable	
ENET-CAT5e-xx ^(1, 2)	Ethernet CAT5e Cable	
USB-AMCM-xx ^(1, 2, 3)	USB Cable A-Male to C-Male	
(A) The provided the decision of the decision		

⁽¹⁾ The "-xx" indicates length in decimeters.

⁽²⁾ iXC4 Only

⁽³⁾ Make sure that you are using a shielded USB-C cable that is designed for data transfer.

4.1. Joystick Interface

Aerotech Multi-Axis Joystick (NEMA12 (IP54) rated) is powered from 5 V and has a nominal 2.5 V output in the center detent position. Three buttons are used to select axis pairs and speed ranges. An optional interlock signal is used to indicate to the controller that the joystick is present. Joystick control will not activate unless the joystick is in the center location. Third party devices can be used provided they produce a symmetric output voltage within the range of -10 V to +10 V.

Connecting joystick with an Aerotech cable, all Aerotech cables are labeled to identify the connector and connections. The joystick parameters must be set to match the analog and digital I/O connections. Refer to the Help file for programming information about how to change joystick parameters.

Figure 4-1: Two Axis Joystick Interface (to the Aux I/O of two drives)


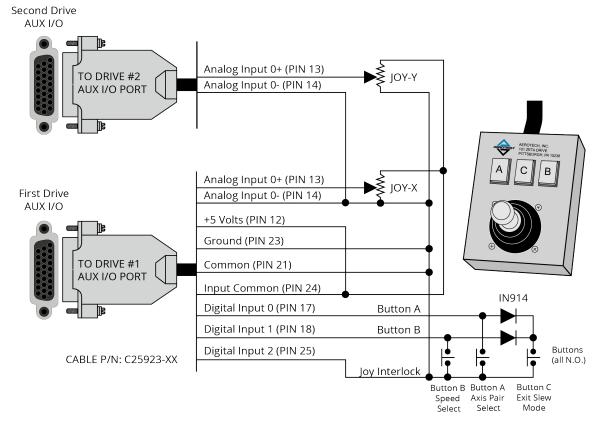


Figure 4-2: Two Axis Joystick Interface (to the I/O board)



4.2. Handwheel Interface

A handwheel can be used to manually control axis position. The handwheel must provide 5V differential quadrature signals to the drive.

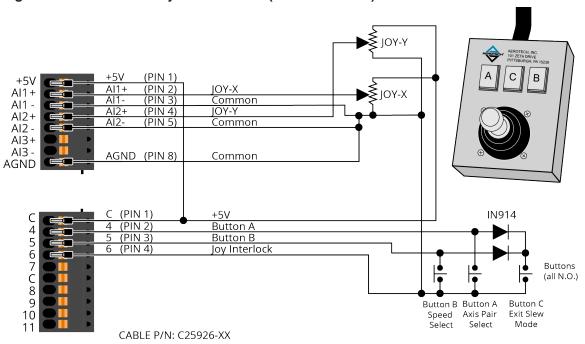

IMPORTANT: You can find instructions on how to enable the handwheel in the online Help file.

Connect a handwheel to the Aux I/O as shown in Figure 4-3 or Figure 4-4.

Figure 4-3: Handwheel Interconnection to Aux I/O Connector


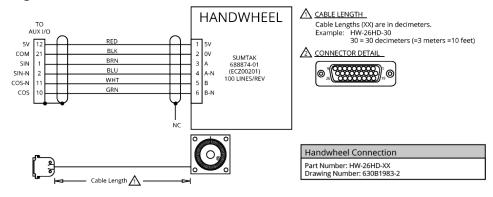


Figure 4-4: Handwheel Interconnection to the Aux I/O through a BBA32 Module



Chapter 5: Maintenance

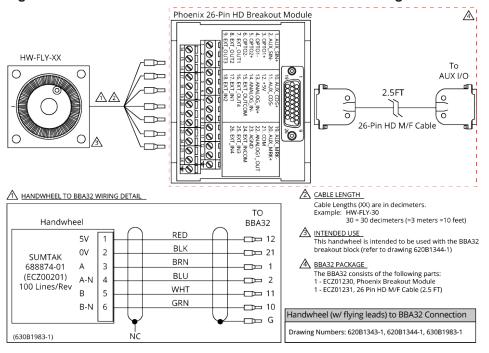

IMPORTANT: For your own safety and for the safety of the equipment:

- Do not remove the cover of the iXC4/XC4.
- Do not attempt to access the internal components.

A fuse that needs to be replaced indicates that there is a more serious problem with the system or setup. Contact Global Technical Support for assistance.

DANGER: If you must remove the covers and access any internal components be aware of the risk of electric shock.



- 1. Disconnect the Mains power connection.
- 2. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
- 3. All tests must be done by an approved service technician. Voltages inside the controller and at the input and output power connections can kill you.

Table 5-1: LED Description

LED	Color	Description
	GREEN	The axis is powered on.
PWR	RED ⁽¹⁾	The light will turn red when power is first applied, a communication problem occurs, or a drive reset is initiated. It will remain red during drive initialization.
	GREEN	The axis is Enabled.
	RED	The axis is in a Fault Condition.
	GREEN/RED (alternates)	The axis is Enabled in a Fault Condition. or The light is configured to blink for setup.
(1) Red PWR LED functionalit	y is only present on s	come versions of the drive.

Table 5-2: Troubleshooting

Symptom	Possible Cause and Solution
	Make sure the power LED is illuminated (this indicates that power is present).
No Communication	Make sure that all communication cables (HyperWire, for example) are fully inserted in their ports.

5.1. Preventative Maintenance

Do an inspection of the iXC4/XC4 and the external wiring one time each month. It might be necessary to do more frequent inspections based on:

- The operating conditions of the system.
- How you use the system.

Table 5-3: Preventative Maintenance

Check	Action to be Taken
Examine the chassis for hardware and parts that are damaged or loose. It is not necessary to do an internal inspection unless you think internal damage occurred.	Repair all damaged parts.
Do an inspection of the cooling vents.	Remove all material that collected in the vents.
Examine the work area to make sure there are no fluids and no electrically conductive materials.	Do not let fluids and electrically conductive material go into the chassis.
Examine all cables and connections to make sure	Make sure that all connections are correctly attached and not loose.
they are correct.	Replace cables that are worn.
	Replace all broken connectors.

Cleaning



DANGER: Before you clean the iXC4/XC4, disconnect the electrical power from the drive.

Use a clean, dry, soft cloth to clean the iXC4/XC4. If necessary, use a cloth that is moist with water or isopropyl alcohol. If you use a moist cloth, make sure that moisture does not go into the drive. Also make sure that it does not go onto the outer connectors and components. Internal contamination from the cleaning solution can cause corrosion and electrical short circuits.

Do not clean the labels with a cleaning solution because it might remove the label information.

5.2. Fuse Specifications




WARNING: Replace fuses only with the same type and value.

Table 5-4: Control Board Fuse Specifications

Fuse	Description	Size	SCCR (1)	Aerotech P/N	Third Party P/N
F100	Control Power at Line Input (L)	2 A S.B.	35 A	EIF01044	Littelfuse 0877002.MXEP
F101	-SX1 (External Shunt) Option	8 A S.B.	1500 A	EIF01022	Littelfuse 0215008.HXP
F102	Motor Bus Supply at AC1 (-10 Peak Current Option)	5 A S.B.	1500 A	EIF01023	Littelfuse 215005.HXP
F102	Motor Bus Supply at AC1 (-20/-30 Peak Current Option)	10 A S.B.	1500 A	EIF01020	Littelfuse 0215010.HXP

⁽¹⁾ Short circuit current rating

Figure 5-1: Fuse Locations on the iXC4 Control Board

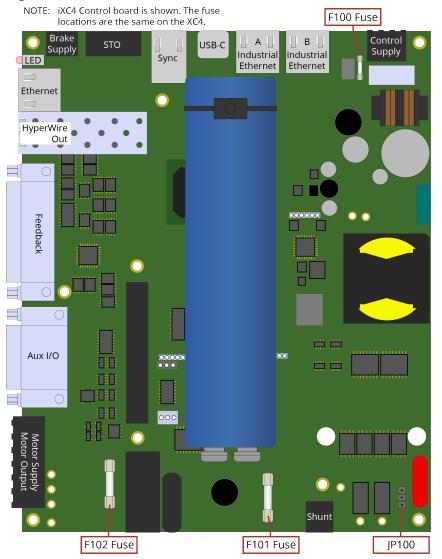

⁽²⁾ F100 is soldered into the PCB and is not user replaceable.

This page intentionally left blank.

Appendix A: Warranty and Field Service

Aerotech, Inc. warrants its products to be free from harmful defects caused by faulty materials or poor workmanship for a minimum period of one year from date of shipment from Aerotech. Aerotech's liability is limited to replacing, repairing or issuing credit, at its option, for any products that are returned by the original purchaser during the warranty period. Aerotech makes no warranty that its products are fit for the use or purpose to which they may be put by the buyer, whether or not such use or purpose has been disclosed to Aerotech in specifications or drawings previously or subsequently provided, or whether or not Aerotech's products are specifically designed and/or manufactured for buyer's use or purpose. Aerotech's liability on any claim for loss or damage arising out of the sale, resale, or use of any of its products shall in no event exceed the selling price of the unit.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL AEROTECH BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES.

Return Products Procedure

Claims for shipment damage (evident or concealed) must be filed with the carrier by the buyer. Aerotech must be notified within thirty (30) days of shipment of incorrect material. No product may be returned, whether in warranty or out of warranty, without first obtaining approval from Aerotech. No credit will be given nor repairs made for products returned without such approval. A "Return Materials Authorization (RMA)" number must accompany any returned product(s). The RMA number may be obtained by calling an Aerotech service center or by submitting the appropriate request available on our website (www.aerotech.com). Products must be returned, prepaid, to an Aerotech service center (no C.O.D. or Collect Freight accepted). The status of any product returned later than thirty (30) days after the issuance of a return authorization number will be subject to review.

Visit Global Technical Support Portal for the location of your nearest Aerotech Service center.

Returned Product Warranty Determination

After Aerotech's examination, warranty or out-of-warranty status will be determined. If upon Aerotech's examination a warranted defect exists, then the product(s) will be repaired at no charge and shipped, prepaid, back to the buyer. If the buyer desires an expedited method of return, the product(s) will be shipped collect. Warranty repairs do not extend the original warranty period.

Fixed Fee Repairs - Products having fixed-fee pricing will require a valid purchase order or credit card particulars before any service work can begin.

All Other Repairs - After Aerotech's evaluation, the buyer shall be notified of the repair cost. At such time the buyer must issue a valid purchase order to cover the cost of the repair and freight, or authorize the product(s) to be shipped back as is, at the buyer's expense. Failure to obtain a purchase order number or approval within thirty (30) days of notification will result in the product(s) being returned as is, at the buyer's expense.

Repair work is warranted for ninety (90) days from date of shipment. Replacement components are warranted for one year from date of shipment.

Rush Service

At times, the buyer may desire to expedite a repair. Regardless of warranty or out-of-warranty status, the buyer must issue a valid purchase order to cover the added rush service cost. Rush service is subject to Aerotech's approval.

On-site Warranty Repair

If an Aerotech product cannot be made functional by telephone assistance or by sending and having the customer install replacement parts, and cannot be returned to the Aerotech service center for repair, and if Aerotech determines the problem could be warranty-related, then the following policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs. For warranty field repairs, the customer will not be charged for the cost of labor and material. If service is rendered at times other than normal work periods, then special rates apply.

If during the on-site repair it is determined the problem is not warranty related, then the terms and conditions stated in the following "On-Site Non-Warranty Repair" section apply.

On-site Non-Warranty Repair

If any Aerotech product cannot be made functional by telephone assistance or purchased replacement parts, and cannot be returned to the Aerotech service center for repair, then the following field service policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs and the prevailing labor cost, including travel time, necessary to complete the repair.

Service Locations

https://www.aerotech.com/contact-sales.aspx?mapState=showMap

USA, CANADA, MEXICO

Aerotech, Inc. Global Headquarters

TAIWAN

Aerotech Taiwan Full-Service Subsidiary

CHINA

Aerotech China Full-Service Subsidiary

UNITED KINGDOM

Aerotech United Kingdom Full-Service Subsidiary

GERMANY

Aerotech Germany Full-Service Subsidiary

Appendix B: Revision History

Revision	Description
2.15	Added MOV information to Section 2.1.2. Motor Supply Connector
2.14	Updated: • Agency Approvals (Agency Approvals) • Feature Summary (Section 1.1.) • Table 5-1 (red power description)
2.13	Update to Section 1.4. Electrical Specifications
2.12	New: • Korean Certification Updated: • Agency Approvals • Section 1.4. Electrical Specifications • Section 2.4. Safe Torque Off Input (STO)
2.11	HyperWire axes documented System Interconnect drawing updated PSO Output latency updated
2.10	
2.09	
2.08	
2.07	
2.06	
2.05	
2.04	Revision changes have been archived. If you need a copy of this revision, contact
2.03	AerotechGlobal Technical Support.
2.02	
2.01	
2.00	
1.02	
1.01	
1.00	

This page intentionally left blank.

Index		Analog Inputs [-EB1]	102
		Analog Output 0 on the Aux I/O Connector	81
		Analog Output 0 Schematic (Aux I/O Connector)	81
-		Analog Output 0 Specifications (Aux I/O Connector)	81
-EB1		Analog Output Connector [-EB1] Mating Connector Part	
Analog Inputs	102	Numbers	101
Analog Outputs	101	Analog Output Connector Pinout [-EB1]	101
Digital Inputs	98	Analog Output Pins (Aux I/O Connector)	81
Digital Outputs	94	Analog Output Specifications [-EB1]	101
I/O Option Board	93	Analog Output Typical Connection [-EB1]	101
Position Synchronized Output (PSO) Interface	103	Analog Outputs [-EB1]	101
-MX1	53	Aux I/O Connector	
-SX1		Analog Input 0	82
External Shunt Option	85	Analog Output 0	81
		Auxiliary Encoder Interface	70
2		Digital Inputs	78
		Digital Outputs	75
2006/42/EC	9	High-Speed User Inputs	80
2014/30/EU	9	Position Synchronized Output	73
2014/35/EU	9,12	PSO	73
		Aux I/O Connector Mating Connector Part Numbers	69
A		Auxiliary Encoder (Aux I/O Connector)	70
Absolute Encoder		Auxiliary I/O Connector	69
BiSS	52,72	Absolute Encoder	72
EnDat	52,72	Analog Encoder	53
SSI	52,72	RS-422 Line Driver Encoder	71
Absolute Encoder (Auxiliary I/O Connector)	72	Sine Wave Encoder	53
Absolute Encoder (Feedback Connector)	52	Square Wave Encoder	71
Absolute Encoder Schematic (Auxiliary I/O Connector)	72	Auxiliary I/O Connector Pinout	69
Absolute Encoder Schematic (Feedback Connector)	52	Auxiliary I/O Pins (Aux I/O Connector)	70
Absolute Encoder Specifications (Auxiliary I/O Connector)	72		
Absolute Encoder Specifications (Feedback Connector)	52	В	
AC line filter	33	BiSS absolute encoder	52,72
Agency Approvals	12	Brake Connected to the Feedback Connector	62
Altitude	29	Brake Control Relay Specifications	62
Analog Encoder (Auxiliary I/O Connector)	53	Brake Output Connector Pinout	83
Analog Encoder Specifications (Feedback Connector)	53	Brake Output Pins on the Feedback Connector	62
Analog Input 0 on the Aux I/O Connector	82	Brake Outputs (Feedback Connector)	62
Analog Input 0 Schematic (Aux I/O Connector)	82	Brake Power Supply Connector	83
Analog Input 0 Specifications (Aux I/O Connector)	82		03
Analog Input Connector [-EB1] Mating Connector Part Numbers	102	Brake Power Supply Connector Mating Connector Part Numbers	83
Analog Input Connector Pinout [-EB1]	102	Brushless Motor Configuration (Motor Power Output Connector)	43
Analog Input Pins (Aux I/O Connector)	82	Brushless Motor Connections (Motor Power Output	.5
Analog Input Typical Connection [-EB1]	102	Connector)	43

Brushless Motor Phasing Goal	45	Digital Inputs (Aux I/O Connector)	78
Brushless Motor Phasing Oscilloscope Example	45	Digital Inputs [-EB1]	98
Brushless Motor Powered Motor Phasing	44	Digital Inputs Connected to a Current Sinking Device [-EB1]	100
Brushless Motor Unpowered Motor and Feedback Phasing	45	Digital Inputs Connected to a Current Sourcing Device [- EB1]	100
С		Digital Inputs Connected to Current Sinking Devices (Aux I/C Connector)) 79
Cable Wires		Digital Inputs Connected to Current Sourcing Devices (Aux	
Brushless Motors	43	I/O Connector)	79
DC Brush Motors	46	Digital Output 1 Connector [-EB1] Mating Connector Part	0.5
Stepper Motors	47	Numbers	95
Cables		Digital Output 1 Connector Pinout [-EB1]	95
HyperWire	84	Digital Output 2 Connector [-EB1] Mating Connector Part Numbers	95
Sync Port	87	Digital Output 2 Connector Pinout [-EB1]	95
Cables and Accessories	105	Digital Output Pins (Aux I/O Connector)	75
cables, examining	110	Digital Output Schematic (Aux I/O Connector)	76
Check for fluids or electrically conductive material exposure	110	Digital Output Specifications (Aux I/O Connector)	75
Cleaning	110	Digital Output Specifications [-EB1]	94
Commands		Digital Outputs (Aux I/O Connector)	75
Sync	87	Digital Outputs [-EB1]	94
Conducted and Radiated Emissions	9-10	Digital Outputs Connected in Current Sinking Mode (Aux I/O	
connections, examining	110	Connector)	77
Control Board Fuse Specifications	111	Digital Outputs Connected in Current Sinking Mode [-EB1]	97
Control Supply Connections	32	Digital Outputs Connected in Current Sourcing Mode (Aux I/	O
Control Supply Connector	32	Connector)	77
Mating Connector Part Numbers	32	Digital Outputs Connected in Current Sourcing Mode [-EB1]	97
Pinout	32	Digital Outputs Schematic [-EB1]	96
cooling vents, inspecting	110	Dimensions	27
Customer order number	15	Drawing number	15
		Drive and Software Compatibility	29
D		Drive IP Rating	
DC Brush Motor Configuration (Motor Power Output	40	IP20	26
Connector)	46	E	
DC Brush Motor Connections (Motor Power Output Connector)	46		
DC Brush Motor Phasing	46		9-10
Declaration of Conformity	9-10	Electrical Specifications	24
Differential Analog Input Specifications [-EB1]	102	Minimum Load Inductance	24
Digital Input 1 Connector Pinout [-EB1]	98	Motor Type	24
Digital Input 2 Connector [-EB1] Mating Connector Part		Power Amplifier Bandwidth	24
Numbers	99	PWM Switching Frequency	24
Digital Input 2 Connector Pinout [-EB1]	99	SCCR	24
Digital Input Pins on the Aux I/O Connector	78	User Power Supply Output	24
Digital Input Specifications (Aux I/O Connector)	78	Electromagnetic Compatibility (EMC)	9
Digital Input Specifications [-EB1]	98	EMC/CE Compliance	41

Enclosure		Absolute Encoder Schematic (Auxiliary I/O Connector)	72
IP54 Compliant	26	Absolute Encoder Schematic (Feedback Connector)	52
encoder		Analog Input 0 Schematic (Aux I/O Connector)	82
absolute	52,72	Analog Input Typical Connection [-EB1]	102
Encoder (Feedback Connector)	50	Analog Output 0 Schematic (Aux I/O Connector)	81
Encoder and Hall Signal Diagnostics	44	Analog Output Typical Connection [-EB1]	101
Encoder Fault Input (Feedback Connector)	58	Brake Connected to the Feedback Connector	62
Encoder Fault Input Pin on the Feedback Connector	58	Brushless Motor Configuration (Motor Power Output	
Encoder Phasing	55	Connector)	43
Encoder Phasing Reference Diagram	55	Control Supply Connections	32
Encoder Pins on the Feedback Connector	50	DC Brush Motor Configuration (Motor Power Output	40
End of Travel Limit Input (Feedback Connector)	59	Connector)	46
End of Travel Limit Input Connections	60	Digital Inputs Connected to a Current Sinking Device [- EB1]	100
End of Travel Limit Input Diagnostic Display	61	Digital Inputs Connected to a Current Sourcing Device	
End of Travel Limit Input Pins on the Feedback Connector	r 59	EB1]	100
End of Travel Limit Phasing	61	Digital Inputs Connected to Current Sinking Devices (A	
EnDat absolute encoder	52,72	I/O Connector)	79
Environmental Specifications	29	Digital Inputs Connected to Current Sourcing Devices	70
EU 2015/863	9	(Aux I/O Connector)	79 76
examining parts		Digital Output Schematic (Aux I/O Connector)	76
cables	110	Digital Outputs Connected in Current Sinking Mode (Au I/O Connector)	лх 77
connections	110	Digital Outputs Connected in Current Sourcing Mode (A	
examining, dangerous fluids	110	I/O Connector)	77
examining, dangerous material	110	Digital Outputs Schematic [-EB1]	96
External Shunt Option [-SX1]	85	End of Travel Limit Input Connections	60
		End of Travel Limit Input Diagnostic Display	61
F		Hall-Effect Inputs Schematic	56
Feedback Connector	49	High-Speed Inputs	80
Absolute Encoder	52	Home Limit Input Connections	60
Brake Outputs	62	Home Limit Input Diagnostic Display	61
Encoder	50	Isolated Output Current Sinks Schematic (PSO)	104
Encoder Fault Input	58	Isolated Output Current Sources Schematic (PSO)	104
End of Travel Limit Input	59	Motor Supply Connections	33
Hall-Effect Inputs	56	Outputs Connected in Current Sinking Mode [-IO]	97
Home Limit Input	59	Outputs Connected in Current Sourcing Mode [-EB1]	97
Pinout	49	Positive Motor Direction	44
Primary Encoder	50	PSO Isolated Output Sinks Current	104
RS-422 Line Driver Encoder	51	PSO Isolated Output Sources Current	104
Square Wave Encoder	51	PSO TTL Outputs Schematic	104
Thermistor Input	57	Square Wave Encoder Inputs Schematic (Aux I/O	
Travel Limit Input	59	Connector)	71
Feedback Monitoring	44	Square Wave Encoder Schematic (Feedback Connector	•
Figure		Stepper Motor Configuration	47
-EB1 I/O Option Board Connectors	93	STO Timing	68
25. 70 Option Board Connoctors	55	Thermistor Input Schematic	57

Three Phase Stepper Motor Configuration	48	J	
TTL Outputs Schematic (PSO)	104	Joystick Interface	106
Typical STO Configuration	64	Joystick interface	100
fluids, dangerous	110	K	
Functional Diagram	23		
Fuse Specifications	111	Korean Certification	11
Control Supply at L	111		
External Shunt (-SX1)	111	L	
Motor Supply at AC1	111	Laser Firing	73
н		М	
Hall-Effect Feedback Pins on the Feedback Connector	56	Maintenance	109
Hall-Effect Inputs (Feedback Connector)	56	material, electrically conductive	110
Hall-Effect Inputs Schematic	56	Mating Connector	
Handling	15	Analog Output Connector [-EB1]	101
Handwheel Interconnection (to Aux I/O through a BBA32		Mating Connector P/N	
Module)	108	Analog Input Connector [-EB1]	102
Handwheel Interconnection to the Aux I/O Connector	108	Aux I/O Connector	69
Handwheel Interface	108	Brake Power Supply Connector	83
High-Speed Input Pins on the Aux I/O Connector	80	Control Supply Connector	32
High-Speed Input Specifications	80	Digital Input 2 Connector [-EB1]	99
High-Speed Inputs	80	Digital Output 1 Connector [-EB1]	95
High-Speed User Inputs (Aux I/O Connector)	80	Digital Output 2 Connector [-EB1]	95
Home Limit Input (Feedback Connector)	59	Feedback Connector	49
Home Limit Input Connections	60	Motor Power Output Connector	42
Home Limit Input Diagnostic Display	61	PSO Connector [-EB1]	103
Home Limit Input Pins on the Feedback Connector	59	STO Connector	63
Humidity	29	Mechanical Specifications	26
HyperWire	84	Minimizing Conducted, Radiated, and System Noise for	
Cable Part Numbers	84	EMC/CE Compliance	41
Card Part Number	84	Minimum Load Inductance specifications	24
		Motor Connector	
I		Mating Connector Part Numbers	49
I/O Option Board [-EB1]	93	Motor Function Relative to STO Input State	67
Input Power Connections	32	Motor Power Output Connector	42
inspecting cooling vents	110	Brushless Motor Connections	43
Inspection	110	DC Brush Motor Connections	46
Installation and Configuration	31	Mating Connector Part Numbers	42
Installation Overview	16	Pinout	42
Introduction	19	Stepper Motor Connections	47
IP20 Drive IP Rating	26	Three Phase Stepper Motor Connections	48
IP54 Compliant Enclosure	26	Motor Supply Connections	33
Isolated Output Current Sinks Schematic (PSO)	104		
Isolated Output Current Sources Schematic (PSO)	104		
-			

Motor Supply Connector	33	Feedback Connector	49
Wiring Specifications	33	Hall-Effect Feedback Pins (Feedback Connector)	56
Motor Type specification	24	High-Speed Input Pins (Aux I/O Connector)	80
Mounting and Cooling	26	Home Limit Input Pins (Feedback Connector)	59
Mounting Hardware	26	Motor Power Output Connector	42
Mounting Orientation	26	Primary Encoder (Feedback Connector)	50
Multi-Axis PSO Tracking	21	PSO Interface Connector [-EB1]	103
Multi-Axis PSO Tracking with the Sync Port	87	PSO Pins (Aux I/O Connector)	73
		STO Connector	63
N		Thermistor Input Pin (Feedback Connector)	57
Nominal Motor Operating Voltages / Required AC Voltages	34	Pollution	29
		Position Feedback in the Diagnostic Display	55
0		Position Synchronized Output (Aux I/O Connector)	73
		Position Synchronized Output (PSO) Interface [-EB1]	103
Operation	29	Positive Motor Direction	44
Overview	19	Power Amplifier Bandwidth specification	24
		Power Requirements	25
Р		Preventative Maintenance	110
packing list	15	Primary Encoder (Feedback Connector)	50
PC Configuration and Operation Information	91	Primary Encoder Pins on the Feedback Connector	50
Phasing		PSO	
DC Brush Motor	46	Isolated Output Sinks Current Schematic	104
End of Travel Limits	61	Isolated Output Sources Current Schematic	104
Powered Brushless Motor	44	Sync Port (multi axis tracking)	87
Stepper Motor	17-48	TTL Outputs Schematic	104
Unpowered Brushless Motor/Feedback	45	PSO (Aux I/O Connector)	73
Pinout		PSO Connector [-EB1] Mating Connector Part Numbers	103
Analog Input Connector [-EB1]	102	PSO Interface Connector Pinout [-EB1]	103
Analog Input Pins (Aux I/O Connector)	82	PSO Output Sources	73
Analog Output Connector [-EB1]	101	PSO Pins (Aux I/O Connector)	73
Analog Output Pins (Aux I/O Connector)	81	PSO Specifications (Aux I/O Connector)	73
Auxiliary I/O Connector	69	PSO Specifications [-EB1]	103
Auxiliary I/O Pins (Aux I/O Connector)	70	PSO Tracking	
Brake Output Connector	83	Sync Port	87
Brake Output Pins (Feedback Connector)	62	PWM Switching Frequency specifications	24
Control Supply Connector Wiring	32		
Digital Input 1 Connector [-EB1]	98	R	
Digital Input 2 Connector [-EB1]	99	Real-Time Clock Requirements	25
Digital Input Pins (Aux I/O Connector)	78	Revision History	115
Digital Output 1 Connector [-EB1]	95	RS-422 Encoder Specifications (Feedback Connector)	51,71
Digital Output Pins (Aux I/O Connector)	75	RS-422 Line Driver Encoder	51
Encoder (Feedback Connector)	50	RS-422 Line Driver Encoder (Auxiliary I/O Connector)	71
Encoder Fault Input Pin (Feedback Connector)	58	2 2 2 (raxinary #0 doi:110001)	
End of Travel Limit Input Pins (Feedback Connector)	59		

S		Electrical Specifications	64
Safe Torque Off Input (STO)	63	External Delay Timer	66
Safety Procedures and Warnings	13	Functional Description	66
SCCR	24	Mating Connector Part Numbers	63
serial data stream	52,72	Motor Function Relative to the STO Input State	67
serial number	15	Signal Delay	67
Sine Wave Encoder (Auxiliary I/O Connector)	53	Standards	65
Sine Wave Encoder Specifications (Feedback Connection)		Standards Data	65
Specifications		Startup Validation Testing	67
Absolute Encoder (Auxiliary I/O Connector)	72	Timing	68
Absolute Encoder (Feedback Connector)	52	Typical Configuration	64
Analog Encoder (Feedback Connector)	53	Storage	15
Analog Input 0 (Aux I/O Connector)	82	Sync-Related Commands	87
Analog Output 0 (Aux I/O Connector)	81	Sync Port	
Analog Outputs [-EB1]	101	PSO Tracking	87
Brake Control Relay	62	Sync Port Cables	87
Control Board Fuses	111	Sync Ports	87
Differential Analog Inputs [-EB1]	102	System part number	15
Digital Inputs (Aux I/O Connector)	78	System Power Requirements	25
Digital Inputs [-EB1]	98		
Digital Outputs (Aux I/O Connector)	75	т	
Digital Outputs [-EB1]	94	Table of Contents	3
High-Speed Inputs	80	Temperature	29
Motor Supply Connector Wiring	33	Thermistor Input (Feedback Connector)	57
PSO (Aux I/O Connector)	73	Thermistor Input Pin on the Feedback Connector	57
PSO [-EB1]	103	Thermistor Input Schematic	57
RS-422 Encoder (Feedback Connector)	51,71	Three Phase Stepper Motor Configuration	48
Sine Wave Encoder (Feedback Connector)	53	Three Phase Stepper Motor Connections (Motor Power	
Square Wave Encoder (Feedback Connector)	51,71	Output Connector)	48
STO Electrical Specifications	64	TM3	34
Unit Weight	26	TM5	34
Square Wave Encoder	51	Transformer Options	34
Square Wave Encoder (Auxiliary I/O Connector)	71	Travel Limit Input (Feedback Connector)	59
Square Wave Encoder Inputs Schematic (Aux I/O Cor	nnector) 71	TTL Outputs Schematic (PSO)	104
Square Wave Encoder Schematic (Feedback Connec	tor) 51	TV0.3-28	34
Square Wave Encoder Specifications (Feedback	54.74	TV0.3-28-56-ST Transformer	34
Connector)	51,71	TV0.3-28-56-ST Transformer (160 VDC Bus)	37
SSI absolute encoder	52,72	TV0.3-28-56-ST Transformer (40 VDC Bus)	35
Stepper Motor Configuration	47	TV0.3-28-56-ST Transformer (80 VDC Bus)	36
Stepper Motor Connections (Motor Power Output Con	-	TV0.3-28 Transformer (40 VDC Bus)	38
Stepper Motor Phasing	47-48	TV0.3-56	34
STO Connector Binout	63 63	TV0.3-56 Transformer (80 VDC Bus)	39
Connector Pinout	63 68	Two Axis Joystick Interface	106
Diagnostics	68	Two Axis Joystick Interface (to the I/O board of two drives)	107

Typical STO Configuration	
U	
Unit Weight	26
Use	29
User Power Supply Output specification	
w	
Warranty and Field Service	113
Wire Colors for Aerotech-Supplied Brushless Motor Cables	43
Wire Colors for Aerotech-Supplied DC Brush Motor Cables	46
Wire Colors for Aerotech-Supplied Stepper Motor Cables	47

This page intentionally left blank.